

# API Maxum OH2 – 610 11<sup>th</sup> Edition Centrifugal Pump

# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Part Number: \_\_\_\_\_

Serial Numbers: \_\_\_\_\_

These operating instructions contain fundamental information and precautionary notes. Please read the manual thoroughly prior to installation of unit, electrical connection and commissioning. It is imperative to comply with all other operating instructions referring to components of individual units.

This manual shall always be kept close to the unit's location of operation or directly on the pump set.



# EC Declaration of Conformity

MANUFACTURER: CARVER PUMP COMPANY 2415 PARK AVE. MUSCATINE, IOWA, USA 52761 www.carverpump.com Phone: 1-563-263-3410 Email: sales@carverpump.com

PRODUCT DESCRIPTION: API MAXUM OH2 Pump

PART NUMBER:

SERIAL NUMBER:

DATE MANUFACTURED:

#### APPLICABLE EUROPEAN DIRECTIVES:

- Machinery: The designated product complies with the following basic requirements of Directive 2006/42/EC: Appendix I, section 1.1.2, 1.1.3., 1.1.5., 1.3.1., 1.3.2., 1.3.3., 1.3.4., 1.3.7., 1.3.8., 1.4.1., 1.4.2.1., 1.5.1., 1.5.8., 1.5.9., 1.5.13., 1.6.1., 1.6.4., 1.6.5., 1.7.
- ATEX: 94/9/EC

APPLICABLE INTERNATIONAL STANDARDS:

Machinery:	EN ISO 12100:2010	EN ISO 13732-1:2008
	EN 626-1:2008	EN ISO 13857:2008
ATEX:	EN 1127-1, EN 13463-1,	EN 13463-5

#### NOTIFIED BODY

Det Norske Veritas, ATEX NB 0575 retains a copy of the Technical File

ATEX product marking:

The product described in this Declaration of Conformity complies with the Applicable European Directives and relevant sections of the Applicable International Standards. The signature on this document authorizes the distinctive European mark to be applied to the equipment described. A Technical Construction File is available for inspection by designated bodies

Authorized Signature:

Date:

Kurt Doren Quality/ ISO Manager

Important safety information is contained in the installation, operation and service manuals; read and understand this information prior to installing or using this equipment

This Document applies only to the equipment described above and is invalid if not reproduced in its entirety.

# SERVICE RECORD PAGE

Service No.	Model		Size and Type
Customer Order No.		Date Installed	
Installation Date		Location	Application
	PU	MP RATING	
Capacity		Total Head	
Suction Pressure		Speed (RPM)	
Liquid pumped		Temperature	
Specific Gravity		Viscosity	
Service			
	PUM	P MATERIALS	
Casing	Impeller		Shaft
Gaskets		Bearing Frame	
Mechanical Seal/Packing			
	МС	TOR DATA	
Motor	Make		Serial No
Туре	Frame		AC or DC
HP	RPM		Volts
Phase	Cycles		

# NOTES ON INSPECTION AND REPAIRS

INSPECTION DATE	REPAIR TIME	REPAIRS	COST	REMARKS

PAGE

# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

# **TABLE OF CONTENTS**

SECTION/PARAGRAPH

#### SECTION/PARAGRAPH

#### PAGE

I.	SENERAL DESCRIPTION1A. General Information1B. ATEX Directive 94/9/EC1C. Disclaimer1D. Personnel Qualification and Training1E. Pump Identification1F. Parts Inventory Guide2G. Parts Ordering2
Π.	GAFETY
III.	QUIPMENT DESCRIPTION6
IV.	FFECTS OF FLUIDS8A. Net Positive Suction Head (NPSH)8B. Changing Pump Speed8C. Effects of Viscosity8D. Effects of Specific Gravity8
V.	ECHNICAL DATA8
VI.	NSPECTION AND STORAGE
VII.	NSTALLATION

	C. D. F. G. H. J.	Foundation Leveling of Unit Grouting Coupling Alignment Pre-Installation Procedures Piping Auxiliary Piping Connection and Gauges Motor	16 16 18 19 19
	K.	Direction of Rotation	
VIII.	A. B. C. E. F. G. H.	ERATION Pre-Start Cautions Priming Starting the Pump Turbine Applications Minimum/Maximum Flow Calculations Operating Checks Stopping the Pump Indefinite Shutdown	20 20 21 21 21 21 21 21
IX.		OUBLESHOOTING OPERATING OBLEMS	22
Х.	MA A. B. C.	INTENANCE Lubrication of Pump Bearings Lubrication of Motor Ball Bearings Torque Values	24 25
XI.	SEI A. B. C. D. E. F. G.	RVICE AND REPAIR Preparations for Disassembly of Pump Disassembly of Pump Parts Inspection Reassembly of Pump Replacement of Wear Ring Motor Check Valve	26 30 34 35 37 38

## **TABLE OF CONTENTS - Continued**

NUMBER

#### LIST OF TABLES

NUMBER	TITLE	PAGE
1.	Fluid Temperature Limits	5
2.	Estimated Noise Characteristics	9
3.	Basic Design Features	11
4.	Key Mechanical Data	12
5.	Permissible Nozzle Loads	13
6.	Pumping Unit Troubleshooting	
7.	Oil Recommendations	25
8.	Ball Bearing Cooling Flow Rates	
	(100 PSIG Max.)	25
9.	Recommended Torque Values (ft-lbs)	25
10.	Recommended Equipment	25
11.	Factory Wear Ring Clearance (Inches)	34
12.	Recommended Spare Parts List	33
13.	Parts List	42

# LIST OF ILLUSTRATIONS TITLE

#### PAGE

1.	Seal Chamber Dimensions	10
2.	Sling Position for Moving Pump	15
3.	Sling Position for Moving Pumping Unit	15
4.	Sling Position for Moving Back Pull-Out	15
5.	Grouting and Foundation Bolting	17
6.	Unit Leveling	
7.	Coupling Alignment	18
8.	Constant Level Oiler	25
9.	Draining the Pumping Unit	27
10.	Preparation to Remove Back Pull-Out	28
11.	Remove Coupling	29
12.	Remove Back Pull-Out	29
	Back Pull-Out, Inboard Exploded View	
14.	Back Pull-Out, Outboard Exploded View	33
15.	Inducer	39
16.	Exploded View of Complete Pump	
	for Reference	40
17.	Wet End Low-Flow High-Head Option	41

# I. GENERAL DESCRIPTION AND SAFETY PRECAUTIONS.

A. <u>GENERAL</u> INFORMATION. Carver Pump Company products are carefully engineered and manufactured and, if properly installed, maintained, and operated, should provide maintenance-free operation and a long service life.



These instructions must always be kept close to the product's operating location or directly with the product.

This manual is designed to provide sufficient material to properly maintain the total pumping unit. The information presented should improve your knowledge and understanding of the API Maxum OH2, thus upgrading the reliability, service life, and quality of pump maintenance.

These operating instructions are intended to facilitate familiarization with the product and its permitted use to help satisfy ATEX safety requirements. These operating instructions do not take into account local regulations; the operator must ensure that such regulations are strictly observed by all, including the personnel called in for installation. Compliance with such laws relating to the proper installation and safe operation of the pumping equipment is the responsibility of the equipment owner and all necessary steps should be taken by the owner to assure compliance with such laws before operating the equipment. These instructions are intended to facilitate familiarization with the product and its permitted use to help satisfy safety requirements. Always coordinate repair activity with operations personnel, and follow all plant safety requirements and applicable safety and health laws/regulations.

Refer to Figures 9 through 14 to locate the pump parts by item number. Variations do exist between configurations, not all parts described in the text may be in your configuration.



These instructions should be read prior to installing, operating, using and maintaining the equipment in any region worldwide and in conjunction with the main user instructions provided. The equipment must not be put into service until all the conditions relating to safety instructions have been met. **B.** <u>ATEX DIRECTIVE 94/9/EC.</u> It is a legal requirement that machinery and equipment put into service within certain regions of the world shall conform to the applicable CE Marking Directives for Equipment for Potentially Explosive Atmospheres (ATEX).

Where applicable the Directive covers important safety aspects relating to the equipment, its use and the satisfactory provision of technical documents. Where applicable this document incorporates information relevant to these Directives. To establish if the product itself is CE marked for a Potentially Explosive Atmosphere check the nameplate and the Certification provided.

**C.** <u>DISCLAIMER.</u> Information in these User Instructions is believed to be reliable. In spite of all the efforts of Carver Pump Company to provide sound and all necessary information the content of this manual may appear insufficient and is not guaranteed by Carver Pump Company as to its completeness or accuracy.

#### D. PERSONNEL QUALIFICATION AND TRAINING.

All personnel involved in the operation, installation, inspection and maintenance of the unit must be qualified to carry out the work involved. If the personnel in question do not already possess the necessary knowledge and skill, appropriate training and instruction must be provided. If required the operator may commission the manufacturer/supplier to provide applicable training.

Follow instructions in this manual carefully. Factory warranty applies only when pump operates under conditions as specified on order acknowledgment, and if pump is properly installed and maintained as recommended herein. A copy of this manual should be available to operating personnel. Additional copies of this manual are available upon request from Carver Pump Company and your local distributor. For comments and/or questions about information provided, please contact Carver Pump Company or your local distributor.

**E.** <u>PUMP IDENTIFICATION.</u> The type of pump, pump size, operating data, and serial number are all stamped on the nameplate attached to the pump. Pump specifications should be recorded upon receipt of the pumping unit. Record all necessary information on the pump service record page and inspection and repair record provided at the front of this manual. This information must be included in all correspondence regarding the unit. This will ensure that the correct pump and/or parts are ordered in a timely manner.

**F. PARTS INVENTORY GUIDE.** To avoid unnecessary delays for maintenance, spare parts should be readily available, purchase before and keep in stock, for normal service. Most conditions will be covered if this manual is followed. For every one to three pumps, stock one spare set consisting of items listed in Table 12, Recommended Spare Parts. Part numbers correspond to Figures 9 through 14.

**G.** <u>**PARTS ORDERING.**</u> When ordering replacement parts, please specify:

- Serial number of pump (located on nameplate)
- Part name (located on parts list)
- Quantity of parts needed

Carver Pump Company may ship an interchangeable part that is not identical in appearance or symbol. This is done only if the part has been improved. Examine parts carefully upon delivery before questioning factory or company representative. Never return parts to the factory without authorization from Carver Pump Company.

 
If an impeller is ordered, specify diameter across blade tips. Be sure diameter was NOT trimmed further than diameter shown on Carver Pump Company records.

If a driver or driver parts are ordered, specify name of manufacturer and all other data found on the driver nameplate.

### II. SAFETY.

A. <u>SAFETY PRECAUTIONS</u>. The manual is designed to provide adequate instructions for the safe and efficient installation, operation, or maintenance of the pump. Failure or neglect to properly install, operate, or maintain the pump may result in personal injury, property damage, or unnecessary damage to the pump. This manual must be read and understood both by the installing personnel and the responsible trained personnel/operators prior to installation and operation, and it must always be kept close to the location of the pumping unit for easy access.

**B.** <u>SUMMARY OF SAFETY MARKING.</u> The safety instructions contained in this manual follow specific ATEX safety marking where non-observance of the instruction will cause a hazard is specially marked with the symbol:



used in safety instructions where noncompliance in the hazardous area would cause the risk of an explosion.



General hazard sign to ISO 7000 - 0434.

The word "Caution" is used to introduce safety instructions whose non-observance may lead to damage to the machine and its functions.

Instructions attached directly to the machine, e.g.

- Arrow indicating the direction of rotation
- Markings for fluid connections must always be complied with and be kept in a perfectly legible condition at all times.

Observe all notes, caution or danger tags attached to the equipment or included in this manual.

#### C. <u>PRODUCTS USED IN POTENTIALLY EXPLOSIVE</u> <u>ATMOSPHERES</u>

Measures are required to:

- Avoid excess temperature
- Prevent buildup of explosive mixtures
- Prevent the generation of sparks
- Prevent leakages
- Maintain the pump to avoid hazard

The following instructions for pumps and pump units when installed in potentially explosive atmospheres must be followed to help ensure explosion protection. Both electrical and non-electrical equipment must meet the requirements of European Directive 94/9/EC.

#### D. SCOPE OF COMPLIANCE.

Use equipment only in the zone for which it is appropriate. Always check that the driver, drive coupling assembly, seal and pump equipment are suitably rated and/or certified for the classification of the specific atmosphere in which they are to be installed.

Where Carver Pump has supplied only the bare shaft pump, the Ex rating applies only to the pump. The party responsible for assembling the pump set shall select the coupling, driver, seal and any additional equipment, with the necessary CE Certificate/Declaration of Conformity establishing it is suitable for the area in which it is to be installed.

The output from a variable frequency drive (VFD) can cause additional heating affects in the motor and so, for pump sets with a VFD, the ATEX Certification for the motor must state that it covers the situation where electrical supply is from the VFD. This particular requirement still applies even if the VFD is in a safe area.

E. <u>SAFETY AWARENESS.</u> It is imperative to comply with the safety instructions contained in this manual, the relevant national and international explosion protection regulations, health and safety regulations and the operator's own internal work, operation and safety regulations.

Ex symbol relates to additional requirements which must be adhered to when the pump is operated in potentially explosive atmospheres.

#### F. <u>SAFETY INSTRUCTIONS FOR THE OPERATOR</u> /USER.

- Any hot or cold components that could pose a hazard must be equipped with a guard by the operator.
- Guards which are fitted to prevent accidental contact with moving parts (e.g. coupling) must not be removed whilst the unit is operating.
- Leakages (e.g. at the seal, deflector) of hazardous fluids (e.g. explosive, toxic, hot) must be contained so as to avoid any danger to persons or the environment. Pertinent legal provisions must be adhered to.
- Electrical hazards must be eliminated. (In this respect refer to the relevant safety regulations applicable to different countries and/or the local energy supply companies.)

If the pumps/units are located in potentially explosive atmospheres, it is imperative to make sure that unauthorized modes of operation are prevented. Noncompliance may result in the specified temperature limits being exceeded. G. <u>SAFETY</u> INSTRUCTIONS FOR MAINTENANCE, INSPECTION AND INSTALLATION WORK. The operator is responsible for ensuring that all maintenance, inspection and installation work be performed by authorized, qualified personnel who are thoroughly familiar with the manual and pumping unit.

To ensure safe operation the radial and thrust bearings must be replaced at 25000 hours of service or whenever the mechanical seal is inspected or serviced.

The pumping unit must have cooled down to ambient temperature, pump pressure must have been released and the pump must have been drained before working on any pumping unit. Work on the pumping unit must be carried out during shutdown. The shutdown procedure described in the manual for taking the unit out of service must be adhered to.

Pumps handling fluids that are hazardous to personnel must be decontaminated prior to being worked on.

Immediately following completion of the work, all safety relevant and protective devices must be reinstalled and/or reactivated. Please observe all instructions set out in the section on start-up before returning the pumping unit to service.

H. <u>NON-COMPLIANCE</u> WITH SAFETY INSTRUCTIONS. Non-compliance with safety instructions may result in personal injury, property damage, or unnecessary damage to the pumping unit. Non-compliance with these safety instructions will also lead to forfeiture of any and all rights to claims for damages. Non-compliance, can for example, result in:

- Failure of important pumping unit functions.
- Failure of prescribed maintenance and servicing practices.
- Hazard to personnel by electrical, mechanical, and chemical effects as well as explosion.
- Hazard to the environment due to leakage of hazardous substances.

I. <u>UNAUTHORIZED</u> <u>MODIFICATION</u> <u>AND</u> <u>MANUFACTURE OF SPARE PARTS.</u> Modifications or alterations of the pumping unit supplied are only permitted after consultation with Carver Pump and to the extent permitted by Carver Pump. Original spare parts and accessories authorized by Carver Pump ensure safety. The use of other parts can invalidate any liability of Carver Pump for consequential damage and/or warranty. J. <u>UNAUTHORIZED MODES OF OPERATION.</u> The warranty relating to operating reliability and safety of the unit supplied is only valid if the pumping unit is used in accordance with its designated use as described in the following sections. The limits stated on the nameplate must not be exceeded under any circumstances.

K. **EXPLOSION PROTECTION.** If the pumps/units are installed in potentially explosive atmospheres, the measures and instructions given in the following sections K.1 to K.6 must be adhered to without fail, to ensure explosion protection.

#### K.1 Unit Fill.

It is assumed that the system of suction and discharge lines and thus the wetted pump internals are completely filled with the fluid to be handled at all times during pump operation, so that an explosive atmosphere is prevented.


If the operator cannot warrant this condition, appropriate monitoring devices must be used.



In addition, it is imperative to make sure that the seal chambers, auxiliary systems of the shaft seal and the heating and cooling systems are properly filled.

#### K.2 Marking.

The marking on the pump only refers to the pump, i.e. the coupling and driver must be regarded separately. The coupling must have an EC manufacturer's declaration. The driver must be regarded separately. An example of ATEX equipment marking is shown below. The actual classification of the pump will be engraved on the nameplate.

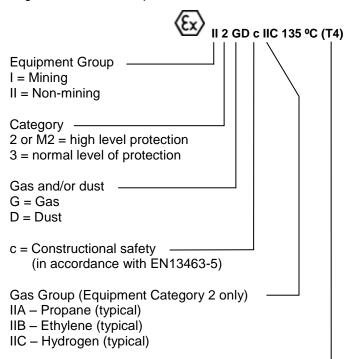

Maximum surface temperature (Temperature Class) (Refer to Section II, Paragraph K.5)

#### K.3 Checking the Direction of Rotation.

If the explosion hazard also exists during the installation phase, the direction of rotation must never be checked by starting up the unfilled pump unit, even for a short period, to prevent temperature increases resulting from contact between rotating and stationary components.

#### K.4 Pump Operating Mode.

Make sure that the pump is always started up with the suction-side shut-off valve fully open and the dischargeside shut-off valve slightly open. However, the pump can also be started up against a closed swing check valve. The discharge-side shut-off valve shall be adjusted to comply with the duty point immediately following the runup process. Pump operation with the shut-off valves in the suction and/or discharge pipes closed is not permitted.



In this condition, there is a risk of the pump casing taking on high surface temperatures after a very short time, due to a rapid temperature rise in the pumped fluid inside the pump. Additionally, the resulting rapid pressure build-up inside the pump may cause excessive stresses on the pump materials or even bursting.

The minimum flows calculated in Section VIII, Paragraph E, refer to water and water-like liquids. Longer operating periods with these liquids and at the flow rates indicated will not cause an additional increase in the temperatures on the pump surface. However, if the physical properties of the fluids handled are different from water, it is essential to check if an additional heat build-up may occur and if the minimum flow rate must therefore be increased.

To check, proceed as described in Section VIII, Paragraph E.

In addition, the instructions given in Section VIII of this operating manual must be observed.

Mechanical seals may exceed the specified temperature limits if run dry. Dry running may not only result from an inadequately filled seal chamber, but also from excessive gas content in the fluid handled.

Pump operation outside its specified operating range may also result in dry running.

#### K.5 Temperature Limits.

In normal pump operation, the highest temperatures are to be expected on the surface of the pump casing, at the shaft seal and in the ball bearing areas. The surface temperature at the pump casing corresponds to the temperature of the fluid handled.

If the pump is heated, it must be ensured that the temperature classes stipulated for the plant are observed.

In the ball bearing bracket area, the unit surfaces must be freely exposed to the atmosphere and the fan inlet flow must be unimpeded.

In any case, responsibility for compliance with the specified fluid temperature (operating temperature) lies with the plant operator. The maximum permissible fluid temperature depends on the temperature class to be complied with.

Table 1 below lists the temperature classes to EN 13463-1 and the resulting theoretical temperature limits of the fluid handled. In stipulating these temperatures, any temperature rise in the shaft seal area has already been taken into account.

Table 1.	Fluid	<b>Temperature Limits</b>
----------	-------	---------------------------

Temperature class to EN 13463-1:	Temperature limit of fluid handled
Т5	185 °F (85 °C)
T4	284 °F (120 °C)
Т3	365 °F (185 °C)
T2	536 °F (280 °C)
T1	662 °F (350 °C)



The permissible operating temperature of the pump in question is indicated on the data sheet. If the pump is to be operated at a higher temperature, the data sheet is missing or if the pump is part of a pool of pumps, the maximum permissible operating temperature must be enquired from the pump manufacturer.

Based on an ambient temperature of  $104^{\circ}$  Fahrenheit (F) [40° Celsius (C)] and proper maintenance and operation, compliance with temperature class T4 is warranted in the area of the rolling element ball bearings. A special design is required for compliance with temperature class T6 in the ball bearing area. In such cases, or if ambient temperature exceeds  $104^{\circ}F$  (40°C), contact the manufacturer.

Pumping liquid over 400°F (204°C); pumps must be equipped with auxiliary cooling.

Pumps of high temperature construction MAY optionally be provided with cooled ball bearings for a unit operating in temperature range between 400° F and 650° F (204° C and 343° C). Cooling water is piped through cavities of the bearing housing and keeps temperature of the ball bearings within acceptable limits. Refer to Table 8 for cooling flow rates of water temperature of 60° F (140° C) for ball bearings.

#### K.6 Maintenance.

Only a pumping unit which is properly serviced and maintained in perfect technical condition will give safe and reliable operation.

This also applies to the reliable function of the thrust and radial ball bearings whose actual lifetime largely depends on the operating mode and operating conditions. Regular checks of the lubricant and the running noises will prevent the risk of excessive temperatures as a result of the thrust or radial ball bearings running hot or defective seal, deflectors.

The correct function of the seal, deflectors must be checked regularly. Any auxiliary systems installed must be monitored, as necessary, to make sure that they function correctly.

#### K.7 General Safety Instructions.

- Various federal, state, and local laws affect installation, use, and operation of pumping equipment. Compliance with such laws relating to proper installation and safe operation of pumping equipment is the responsibility of the equipment owner.
- Prior to working on pump or driver, ensure all switches and circuit breakers have been locked in the open (off) position and tagged, "Out of Service."
- All circuits NOT known to be dead must be considered live at all times.
- DO NOT wear loose or torn clothing around rotating machines.
- While working near electricity, DO NOT use metal rules, flashlights, metallic pencils, or any other objects having exposed conducting material.

- Make sure you are NOT grounded while adjusting electrical equipment or using measuring equipment.
- In general, use only one hand when servicing live electrical equipment.
- Make sure to de-energize all electrical equipment before connecting or disconnecting meters or test leads.
- For connecting a meter to terminals for measurement, use a range higher than the expected voltage.
- Check to make sure that the frame of the driver and starter panel are securely grounded before operating pumping unit or performing any tests or measurements.
- If a test meter must be held or adjusted while voltage is applied, ground case of meter before starting measurement. DO NOT touch live equipment while holding the meter. Some moving vane-type meters should not be grounded nor held during measurements.
- DO NOT use test equipment known to be damaged or in poor condition.

The following specific safety precautions apply to the pumping unit:

• DO NOT exceed maximum discharge pressure.

# **III. EQUIPMENT DESCRIPTION.**

The API Maxum OH2 is our process pump for handling hydrocarbons in refining and process industry applications. It is offered as a centerline mounted unit. Hydraulic performance extends to 9,000 GPM and 720 feet of head. The design is restricted as noted below.

The Maxum pump unit consists of a pump, base, coupling, coupling guard and a driver unit. The driver is usually an electric motor, but can be a steam turbine or any other power conversion device that can provide the required horsepower at the proper RPM. Drivers other than electric motors must be reviewed for compliance with the applicable directives.

The Maxum pump is supplied with a casing that should always be mounted solidly on an adequate bedplate. No shims should be used under the feet of the casing.

The Maxum pump is designed as a back pullout unit. Therefore it should always be used with a spacer coupling. The spacer width should permit the entire rotating assembly to be removed from the casing. Normally the casing should be left in place on the base and remain connected to the suction and discharge piping.

The bare pump consists of following major parts and options. Refer to Figures 9 through 14 for the location of parts identified by item numbers.

**Item 001 - Casing.** The casing (001) houses the impeller (002) and wear ring (007) and consists of the suction inlet, and discharge nozzle. The back cover (011) is held in place between the casing and the bearing frame (019). The casing is fastened to the back cover with studs (820D) and hex nuts (830F).

**Item 002 or 003\* - Impeller.** The impeller (002 or 003\*) is keyed to the shaft (006) by the impeller key (032A) and is locked in place by the acorn nut (024) or optional inducer (246\*) and impeller washer (028).

**Item 006 - Shaft.** The shaft (006) of the Maxum pump is designed for maximum deflection of 0.002 inch at the face of the mechanical seal (089). The shaft is also designed to provide stabilization to the rotor system when pump operates away from the best efficiency point. A coupling (042) connects the shaft to the driver (190) shaft. The pump coupling key (046B) holds the coupling in place, causing it to rotate with the shaft.

**Item 011 – Back Cover.** The back cover (011) is fastened to the casing (001) with studs (820D), hex nuts (830F). The back cover houses wear ring (007A) and mechanical seal (089). The back cover is positioned in the casing bore with casing gasket (73D\*) or O-ring (119B\*).

The bearing frame (019) is attached to the back cover with studs (820C), hex nut (830D) and lockwashers (840E).

The back cover (011) contains hex bolts (808A) to aid in loosening the back cover from the casing (001).

**Item 016 and 018 –Bearings.** A deep-groove Conrad-type, C3 internal fit radial ball bearing (016) and light preload, back-to-back mounted thrust ball bearings (018) are housed in the bearing frame (019). The thrust bearings (018) will be designated as 7000 or 8000 series. Thrust bearings designated in the 7000 series will be duplex 40° angular contact ball bearings. Thrust bearings designated in the 8000 series will have 40° and 15° angular contact. The thrust bearing is held in place by the bearing locknut (022) and bearing lockwasher (069). The bearings are oil lubricated. Either oil bath lubrication or an oil mist system may be employed. **Item 019 - Bearing frame.** The principal function of the bearing frame (019) is to carry the loads from the liquid end of the pump to the base and to transport power from the power unit to the impeller (002 or 003\*). The bearing frame has a radial ball bearing (016) located in the front end of the bearing frame (nearest to the casing) and a pair of back-to-back mounted angular contact thrust bearings (018) in the rear of the bearing frame. This bearing frame is designed to be oil lubricated, which can be accomplished in several ways.

The first method involves the use of a sight glass constant level oiler (890A). The sight glass maintains the oil level high enough on the higher of the two bearings so that the bearings themselves provide the motivation for the oil to be moved through the races of the bearings.

A second method is to provide an oil flinger (060\*) which mounts on the shaft (006) and literally flings the oil throughout the bearing housing. An oil view sight (143\*) is usually used with this system to make sure that the oil level within the frame can be observed and maintained at the proper level.

A third method is the oil mist system. All Maxum pumps are equipped so that they can be used or can be converted to oil mist units without any field machining.

Oil Mist system for ATEX applications require a user installed system of safety controls or alarms to insure that the pump is shut down in event of an oil mist failure.

In addition to the oil lube system, the bearing frame (019) contains the deflector seals (715 & 716). The Maxum pump bearing frame is equipped with a labyrinth oil seal assembly which becomes a static seal when stopped.

**Item 023 - Base.** A grout-able base (023) is designed to provide adequate support for the pump and motor so pump can be operated without base deflection, excessive vibration, or resonance. The casing (001) is attached to the base with stud (820G) and hex nut (830J). Grouting of this type of base is required by Carver Pump Company.

**Item 089 – Mechanical Seal.** Cartridge mechanical seals (089) are to be used. Complete cartridge mechanical seal instructions should be obtained from the seal manufacturer. The standard seal chamber dimensions are shown in Figure 1.

# IV. EFFECTS OF FLUIDS.

Solids in the fluid pumped may cause internal damage to pump casing and damage to the seal faces with resulting Hazardous conditions. Care is to be taken to ensure that the process fluid is clear of solids and debris.

A. <u>NET POSITIVE SUCTION HEAD (NPSH).</u> Any liquid, hot or cold, must be pushed into the impeller of the pump by some absolute pressure, such as the atmosphere or the vessel pressure from which the pump takes its action.

The head in feet of liquid necessary to maintain the required flow into the pump is called the Net Positive Suction Head (NPSH). This value is measured above the vapor pressure of the liquid at the pumping temperature.

NPSH is commonly expressed in two ways: the NPSH required by the pump, and shown on the pump curve, is the head needed to cover the losses in the pump suction and the energy required to enable the liquid to climb onboard the leading edge of the impeller vane. The NPSH available is that inherent in the system, taking into account friction losses in suction piping, valves, fittings, etc. In all cases, the NPSH available, measured above vapor pressure, must exceed the NPSH required in order to push the liquid into the pump.

**B.** <u>CHANGING PUMP SPEED.</u> Changing the speed of a centrifugal pump affects the capacity, total head, NPSH required and the brake horsepower. In general the capacity will vary in a direct ratio with the speed, whereas the total head and NPSH required will vary as the ratio of the speed squared. The brake horsepower will vary as the ratio of the speed cubed.

C. <u>EFFECTS OF VISCOSITY.</u> The pump is designed to deliver rated capacity at rated head for a liquid with a particular viscosity. When pump is handling heavy viscous liquid, the viscosity of the liquid must allow it to be pumped easily. The liquid may have to be heated prior to starting the pump. When contemplating operation at some viscosity other than that for which the pump was originally designed, check with Carver Pump Company. **D. EFFECTS OF SPECIFIC GRAVITY.** The capacity and total head in feet of liquid developed by a centrifugal pump are fixed for every point on the curve and are always the same for the same speed. Neither capacity nor total head will be affected by a change in the specific gravity of the liquid pumped. However, since the discharge pressure in Pounds per Square Inch (PSI) and the brake horsepower required driving the pump are functions of the specific gravity of the liquid, both will be affected in direct proportion by any change in specific gravity. Therefore, an increase in specific gravity will raise the discharge pressure and is dangerous as it might overload the pump's driver, or exceed the pump casing allowable pressure.

# V. TECHNICAL DATA.

Specifications and operating limits should be recorded on a Service Record Page; an example is located in the front matter of this manual. Record the necessary information upon receipt of the pumping unit.

**Estimated Sound Pressure Values.** The sound pressure values in Table 2 are estimated values as measured at 1 meter. Noise levels for sizes larger than 200 Horsepower (HP) need considered on a case by case basis, as larger motors vary greatly in air borne noise values.

**Seal Chamber Dimensions.** Standard seal chamber dimensions are located in Figure 1 and are arranged by bearing housing number.

**Basic Design Features.** Basic design features of the pump are located in Table 3 and are arranged by pump size.


**Key Mechanical Data.** Key mechanical data for the pump is located in Table 4 and is arranged by bearing housing number.

**Permissible Nozzle Loads.** The forces and moments in Table 5 are to be understood as the limit for a single acting force or moment along the particular coordinate axes or any resultant of two or more forces and moment.

Мс	otor 3550 RI		Motor		3550 RPM 2		RPM	1750	RPM	1450	RPM	1150	RPM
HP	kW	Pump and Motor dB[A]	Pump Only dB[A]										
>5	>3.7	82	77	81	78	74	71	75	73	71	69		
7.5	5.6	86	81	85	82	78	75	79	77	75	73		
10	7.4	86	81	85	82	78	75	79	77	75	73		
15	11.2	87	82	86	83	79	76	80	78	76	74		
20	14.9	88	83	87	84	80	77	81	79	77	75		
25	18.6	88	83	87	84	80	77	81	79	77	75		
30	22.4	88	83	87	84	80	77	81	79	77	75		
40	29.8	96	91	95	92	88	85	89	87	85	83		
50	37.3	96	91	95	92	88	85	89	87	85	83		
60	44.7	96	91	95	92	88	85	89	87	85	83		
75	55.9	96	91	95	92	88	85	89	87	85	83		
100	74.6	96	91	95	92	88	85	89	87	85	83		
125	93.2	96	91	95	92	88	85	89	87	85	83		
150	111.9	96	91	95	92	88	85	89	87	85	83		

Table 2.	Estimated	Noise	Characteristics
----------	-----------	-------	-----------------

The tolerance for these values is  $\pm 3 \text{ dB}[A]$ .

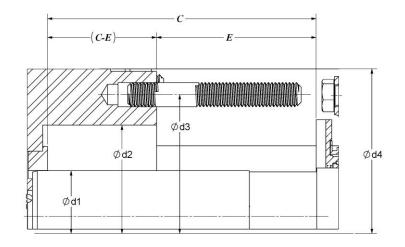

	Seal Chamber Dimensions (Inches)									
Bearing Frame Number	Pump Size	Shaft Diameter d1	Box Bore d2	Stud Circle d3	Max Gland Diameter d4	Total Length C	Clear Length E	Box Depth C-E	Stud Size (Qty = 4)	
3	6	1.5748/1.5742	3.5430/3.5444	4.921	6.625	6.500	4.000	2.500	1/2"-13UNC	
4	8	1.9685/1.9679	3.9370/3.9384	5.512	6.625	6.900	4.400	2.500	5/8"-11UNC	
5	10	2.3622/2.3615	4.7244/4.7258	6.300	7.750	6.900	4.400	2.500	5/8"-11UNC	
6	13	2.5000/2.4995	5.1181/5.1197	6.693	7.750	6.900	4.400	2.500	5/8"-11UNC	
8	16 & 20	3.5433/2.5424	6.2992/6.3008	8.070	10.875	7.290	4.790	2.500	3/4"-10UNC	

Figure 1.	Seal	Chamber	Dimensions
-----------	------	---------	------------


Table 3.	Basic	Desian	Features
1 4010 01	Babio	Doolgii	i outui oo

Pump Size	Bearing	Max Speed	1 <sup>st</sup> Critical	Casing	Design		Shaft Deflection @ 20% BEP		WK <sup>2</sup> @ Max.
	Frame	(RPM)	Speed (RPM)	Discharge	Volute(s)	@ Seal (in.)	@ Impeller (in.)	Stiffness L³/D⁴	Impeller Dia.
AA- 1½ x 1 x 6	3	3500	13068	Centerline	Single	0.0002	0.0009	183.3	9.500
AB - 2 x 1½ x 6	3	3500	12098	Centerline	Single	0.0006	0.0019	183.3	10.45
AC- 3 x 1½ x 6	3	3500	11317	Centerline	Single	0.0006	0.0021	183.3	11.40
AD - 3 x 2 x 6	3	3500	12098	Centerline	Single	0.0011	0.0036	183.3	10.45
AE - 4 x 3 x 6	3	3500	10122	Centerline	Dual	0.0021	0.0070	183.3	15.20
BA - 1½ x 1 x 8	4	3500	12262	Centerline	Single	0.0003	0.0011	83.6	34.31
BB - 2 x 1½ x 8	4	3500	10754	Centerline	Single	0.0005	0.0017	83.6	41.42
BC - 3 x 1½ x 8	4	3500	11193	Centerline	Single	0.0006	0.0022	83.6	39.05
BD - 3 x 2 x 8	4	3500	11193	Centerline	Single	0.0008	0.0029	83.6	39.05
BE – 4 x 3 x 8	4	3500	10363	Centerline	Dual	0.0004	0.0014	83.6	43.79
BF - 6 x 4 x 8	4	3500	10012	Centerline	Dual	0.0005	0.0017	83.6	46.16
CA – 2 x 1½ x 10	5	3500	13192	Centerline	Single	0.0002	0.0012	42.3	92.29
CB - 3 x 1½ x 10	5	3500	13192	Centerline	Single	0.0002	0.0011	42.3	92.29
CC - 3 x 2 x 10	5	3500	12773	Centerline	Single	0.0004	0.0022	42.3	92.29
CD - 4 x 3 x 10	5	3500	12042	Centerline	Quad	0.0006	0.0032	42.3	108.6
CE - 6 x 4 x 10	5	3500	10429	Centerline	Dual	0.0002	0.0012	42.3	141.3
CF - 6 x 6 x 10	5	1750	8288	Centerline	Dual	0.0002	0.0010	42.3	141.3
CG - 8 x 6 x 10	5	1750	10020	Centerline	Dual	0.0002	0.0012	42.3	152.2
DA - 2 x 1½ x 13	6	3500	11224	Centerline	Single	0.0003	0.0019	35.0	209.6
DB - 3 x 2 x 13	6	3500	8511	Centerline	Single	0.0005	0.0026	35.0	201.8
DC - 4 x 3 x 13	6	3500	9515	Centerline	Quad	0.0009	0.0054	35.0	263.8
DD - 6 x 4 x 13	6	3500	9098	Centerline	Dual	0.0002	0.0013	35.0	287.1
DE - 6 x 6 x 13	6	1750	8306	Centerline	Dual	0.0002	0.0010	35.0	310.3
DF - 8 x 6 x 13	6	1750	7130	Centerline	Dual	0.0003	0.0016	35.0	310.3
DG - 10 x 8 x 13	6	1750	6728	Centerline	Dual	0.0004	0.0023	35.0	418.9
DH – 12 x 10 x 13	6	1750	6215	Centerline	Dual	0.0008	0.0043	35.0	418.9
ED- 6 x 4 x 16	8	1750	8223	Centerline	Dual	0.0001	0.0005	19.5	563.6
EA-8x6x16	8	1750	7885	Centerline	Dual	0.0001	0.0011	19.5	647.3
EB - 10 x 8 x 16	8	1750	9053	Centerline	Dual	0.0001	0.0012	19.5	595.9
EE - 12 x 10 x 16	8	1750	7840	Centerline	Dual	0.0001	0.0006	19.5	722.6
EC - 14 x 12 x 16	8	1750	7752	Centerline	Dual	0.0004	0.0035	19.5	849.4
FA - 8 x 6 x 20	8	1750	7478	Centerline	Dual	0.0001	0.0012	19.5	1232.0
FB - 10 x 8 x 20	8	1750	7288	Centerline	Dual	0.0002	0.0018	19.5	1495.0
FC - 12 x 10 x 20	8	1750	6714	Centerline	Dual	0.0003	0.0026	19.5	1859.0
FD - 14 x 12 x 20	8	1750	6075	Centerline	Dual	0.0005	0.0039	19.5	2298.0

Item	Bearing Frame							
	3	4	5	6	8			
Max power (BHP) @ 3500 RPM	150	240	550	550	-			
@ 1750 RPM	75	120	275	275	1500			
@ 1150 RPM	50	80	180	180	1000			
Bearing type - radial ball bearing	6211	6211	6213	6213	6219			
thrust ball bearing	7311	7311	7313	7313	7318			
Lubrication method (standard)	Oil - ISO Grade 22, 32 or 68							
L <sub>10</sub> bearing life (hrs) - radial	50,000							
thrust	50,000							
Radial to thrust ball bearing centerline (in.)	5.192	5.192	8.939	8.939	13.198			
Shaft diameter (in.) @ coupling	1.375	1.375	2.000	2.000	3.000			
@ impeller hub (standard ext.)	1.000	1.375	1.375	1.875	2.375			
@ radial ball bearing	2.166	2.166	2.559	2.559	3.741			
@ thrust ball bearing	2.166	2.166	2.559	2.559	3.544			
@ seal box	1.575	1.968	2.362	2.500	3.543			
Coupling Key – width (in.)	0.313	0.313	0.500	0.500	0.750			
length (in.)	2.625	2.625	2.000	2.000	5.000			

#### Table 4. Key Mechanical Data

#### Table 5. Permissible Nozzle Loads

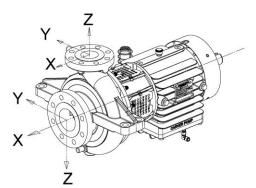

Dump Size				Suction	า				0	Dischar	ge	
Pump Size	Fx	Fy	Fz	Mx	Му	Mz	Fx	Fy	Fz	Мх	My	Mz
AA- 1½ x 1 x 6	200	160	130	340	170	260	160	130	200	340	170	200
AB - 2 x 1½ x 6	200	160	130	340	170	260	160	130	200	340	170	200
AC- 3 x 1½ x 6	300	240	200	700	350	530	160	130	200	340	170	200
AD - 3 x 2 x 6	300	240	200	700	350	530	160	130	200	340	170	200
AE - 4 x 3 x 6	400	320	260	980	500	740	240	200	300	700	350	530
BA - 1½ x 1 x 8	200	160	130	340	170	260	160	130	200	340	170	200
BB - 2 x 1½ x 8	200	160	130	340	170	260	160	130	200	340	170	200
BC - 3 x 1½ x 8	300	240	200	700	350	530	160	130	200	340	170	200
BD - 3 x 2 x 8	300	240	200	700	350	530	160	130	200	340	170	200
BE – 4 x 3 x 8	400	320	260	980	500	740	240	200	300	700	350	530
BF - 6 x 4 x 8	700	560	460	1700	870	1,300	320	260	400	980	500	740
CA – 2 x 1½ x 10	200	160	130	340	170	260	160	130	200	340	170	200
CB - 3 x 1½ x 10	300	240	200	700	350	530	160	130	200	340	170	200
CC - 3 x 2 x 10	300	240	200	700	350	530	160	130	200	340	170	200
CD - 4 x 3 x 10	400	320	260	980	500	740	240	200	300	700	350	530
CE - 6 x 4 x 10	700	560	460	1700	870	1,300	320	260	400	980	500	740
CF - 6 x 6 x 10	700	560	460	1700	870	1,300	560	460	700	1700	870	1300
CG - 8 x 6 x 10	1100	850	700	2600	1,300	1,900	560	460	700	1700	870	1300
DA - 2 x 1½ x 13	200	160	130	340	170	260	160	130	200	340	170	200
DB - 3 x 2 x 13	300	240	200	700	350	530	160	130	200	340	170	200
DC - 4 x 3 x 13	400	320	260	980	500	740	240	200	300	700	350	530
DD - 6 x 4 x 13	700	560	460	1700	870	1,300	320	260	400	980	500	740
DE - 6 x 6 x 13	700	560	460	1700	870	1,300	560	460	700	1700	870	1300
DF - 8 x 6 x 13	1100	850	700	2600	1,300	1,900	560	460	700	1700	870	1300
DG - 10 x 8 x 13	1500	1200	1000	3700	1800	2800	850	700	1100	2600	1,300	1,900
DH – 12 x 10 x 13	1800	1500	1200	4500	2200	3400	1200	1000	1500	3700	1800	2800
ED- 6 x 4 x 16	700	560	460	1700	870	1,300	320	260	400	980	500	740
EA-8x6x16	1100	850	700	2600	1,300	1,900	560	460	700	1700	870	1300
EB - 10 x 8 x 16	1500	1200	1000	3700	1800	2800	850	700	1100	2600	1,300	1,900
EE - 12 x 10 x 16	1800	1500	1200	4500	2200	3400	1200	1000	1500	3700	1800	2800
EC - 14 x 12 x 16	2000	1600	1300	4700	2300	6300	1,500	1200	1800	4500	2200	3400
FA - 8 x 6 x 20	1100	850	700	2600	1,300	1,900	560	460	700	1700	870	1300
FB - 10 x 8 x 20	1500	1200	1000	3700	1800	2,870	850	700	1100	2600	1,300	1,900
FC - 12 x 10 x 20	1800	1500	1200	4500	2200	3400	1200	1000	1500	3700	1800	2800
FD - 14 x 12 x 20	2000	1600	1300	4700	2300	6300	1,500	1200	1800	4500	2200	3400

M = Moments measured in Foot-Pounds (FT-lbs) F = Forces measured in Pounds (lbs)

# VI. INSPECTION AND STORAGE.

A. <u>INSPECTION</u>. Upon receipt of the shipment, unpack and inspect the pumping unit and individual parts to insure none are missing or damaged. Carefully inspect all boxes and packing material for loose parts before discarding them. Check to make sure the shipment complies with the purchase order. Immediately report any missing parts or damage incurred during shipment to the factory and to the Transportation Company and file your "damage and/or lost in shipment" claim with the carrier.

**B.** <u>PACKING FOR RETURN.</u> If the pumping unit is sent back to Carver Pump Company for repair, drain the unit, and re-seal all flanges and connections that were covered or plugged. Ship the pump(s) in an assembled condition to prevent damage to sealing faces of individual components. A Return Goods Authorization (RGA) and a Material Safety Data Sheet (MSDS) is required on all returned pumps. Copies of MSDS records should be kept and maintained by the customer. The customer is responsible for cleaning and flushing the pump before it is returned to the factory. Make sure to specify the fluid used in the service.

**C.** <u>STORAGE OF PUMP.</u> If the equipment is not to be immediately installed and operated, store it in a clean, dry, well ventilated place, free from vibrations, moisture and rapid or wide variations in temperature.

#### NOTE

Storage requirements vary depending on climatic environment, length of storage and equipment. For storage periods of three months or longer, contact manufacturer for specific instructions. Improper storage could damage equipment and would result in non-warranty covered restoration of non-warranty covered product failures.

When storing the pump up to three months rotate the shaft for several revolutions at least once per month to coat the ball bearings with lubricant, retard oxidation and corrosion, and prevent possible false brinelling.

The motor ball bearings should be prepared for storage according to the motor manufacturer's instructions, in the motor manufacturer's maintenance manual, which should come with the motor.



For shipment and long term storage purposes the pump ball bearing shall be fogged once every 30 days during storage with a rust retardant compatible with the oil used in the system to prevent rusting.

A pump which is made of iron or steel that sits in extreme heat, high humidity, or full or partially full water over 30 days will rust and will most likely seize. If the pump rusts and/or seizes, a complete overhaul and repair may be necessary to refurbish the pump.

Consider a unit to be in storage when:

- 1. It has been delivered to the job site and is waiting to be installed.
- 2. It has been installed but operation is delayed pending completion of construction.
- 3. There are long (30 days or more) periods between operating cycles.
- 4. The plant (or department) is shut down for periods of longer than 30 days.

Measures to be taken for prolonged shutdown of installed pumping unit. If the pumping unit remains installed a periodic check of operation is in order to make sure that the pump is always ready for instant start-up and to prevent the formation of deposits within the pump and the pump intake area. Start up the pumping unit regularly once a month or once every 3 months for a short time (approximately 5 minutes) during prolonged shutdown periods. Prior to operation check run ensure that there is sufficient liquid available for operating the pump.

**Interim Storage (Indoors)/ Preservation.** When the unit is temporarily put into storage, only the wetted low alloy must be preserved. Commercially available preservatives can be used for this purpose. Please observe the manufacturer's instructions for application/removal.

The unit/pump should be stored in a dry room where the atmospheric humidity is as constant as possible.

If stored outdoors, the unit and crates must be covered by waterproof material to avoid any contact with humidity.

Protect all stored goods against humidity, dirt, vermin and unauthorized access!

All openings of the assembled unit components are closed and must only be opened when required during installation.

All blank parts and surfaces of the pump are oiled or greased (silicone-free oil and grease) to protect them against corrosion.

# VII. INSTALLATION.

A. <u>LOCATION.</u> The pump assembly should be located in an area that will permit periodic inspection and maintenance. Head room and access should be provided and all units should be installed in a dry location with adequate drainage.

The pump assembly should be installed as close to the fluid as possible. A short, direct suction pipe can be used to keep suction losses at a minimum. If possible, locate the pump so fluid will flow by gravity to the suction opening. The discharge piping should be direct with as few elbows and fittings as possible. The total Net Positive Suction Head Available (NPSHA), which includes the suction lift and pipe friction losses, must be greater than the Net Positive Suction Head Required (NPSHR) by the pump.

#### B. HANDLING.



Use a hoist with adequate lifting capacity.

Do not pick up the complete unit by the motor or the pump shafts or motor lifting eyes.

If the pumping unit slips out of the sling arrangement, it may cause injury to personnel and/or damage to the pumping unit.

Moving the unit requires proper preparation and handling. Always make sure that the pump or the pumping unit remains in a horizontal position while being moved and cannot slip out of the transport suspension arrangement. Use a sling for pumps without baseplates, refer to Figure 2. To lift a horizontal mounted unit, a hoist or suitable lifting device should be attached to each lifting eye of the base structure, refer to Figure 3. Use a sling to move the back pull-out of the pump, refer to Figure 4. The individual motor may be lifted using proper eyebolts provided by the manufacturer, but these should not be used to lift the assembled unit.

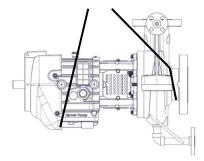


Figure 2. Sling Position for Moving Pump


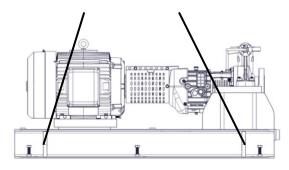


Figure 3. Sling Position for Moving Pumping unit

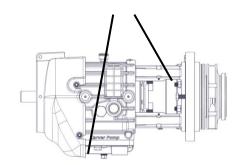

#### Figure 4. Sling Position for Moving Back Pull-Out

**C.** <u>FOUNDATION.</u> Make sure that the concrete foundation has set firmly before placing the unit on it. Its surface must be truly horizontal and even. The foundation bolts must be inserted in the base holes. The foundation should be 3 to 6 inches wider and longer than the base, have a level surface, and be of sufficient mass to prevent vibration and form a permanent rigid support for the unit. The best foundations are concrete with anchor bolts of adequate size embedded in the foundation in pipe sleeves having an inside diameter 2-1/2 times larger than the bolt diameter. This will allow for accurate positioning of the unit. Keep the concrete surface clean, yet rough.

Hydraulic Institute (HI) recommends a foundation capable of absorbing vibration at least five times the weight of the pumping unit and to form a permanent, rigid support for the base plate. Consequently, maintaining the pump to driver alignment is important for a flexible coupled unit, refer to Figure 7. A concrete foundation on a solid base is recommended. Use foundation bolts of the proper size embedded into the concrete. A pipe sleeve larger in diameter than the bolt should be used. This allows movement for final positioning of the bolts. Refer to Figure 5, Grouting and Foundation Bolting.

**D.** <u>LEVELING OF UNIT.</u> When the pump is supplied complete with motor and base, the unit is assembled at the factory. Lower unit onto foundation, positioning base structure so anchor bolts are aligned in middle of holes in base.



Do not attempt to straighten the base by using the anchor bolts.

As soon as the pump and driver, mounted on a base, is placed on the foundation, remove the coupling guard and disconnect coupling halves. The base should be supported by the provided leveling screws. Refer to Figure 6; adjust the leveling screws until provided base milled leveling pads are true in both the axial and transverse directions. Verify that the pump and driver shafts are level. Check coupling faces, as well as, suction and discharge flanges of the pump for horizontal or vertical positioning by means of a level. Make corrections, as necessary, by adjusting the leveling screws on the base.

If the base doesn't have leveling screws, the base should be supported on either rectangular metal blocks with shims or on metal wedges having a small taper. The support pieces should be placed close to the foundation bolts. Refer to Figure 5, Grouting and Foundation Bolting. Place supports directly under the part of the base, which carries the greatest weight. Space the supports closely enough to provide uniform support of the base. Adjust the metal supports or wedges until the shaft is level. Check suction and discharge flanges of the pump by means of a level. Make corrections, as necessary, by adjusting the supports or wedges under the base.

The base should be supported on metal shims or metal wedges placed directly beneath the part of the base supporting the most weight. The shims or wedges should be spaced close enough to give support and stability.

Adjust metal supports or wedges until suction and discharge flanges are level.

**E.** <u>**GROUTING.</u>** After the pumping unit has been leveled and the alignment is correct, grout the unit to the foundation using a high-grade, non-shrinking grout. Proceed grouting using the following procedure:</u>

Prepare concrete foundations, anchor bolts and leveling screws according to individual instructions covering these items.

- Wax forms heavily with at least three coats of paste wax. Forms must be substantial and well braced. All corners, joints, bottoms must be sealed with silicone caulk for water tightness. All forms should have a 45° chamfer strip installed to prevent stress risers.
- 2. Anchor bolt-free length must be wrapped with duct seal or electricians plastic tape to prevent grout from contacting the bare metal. Grout sticking to the anchor bolt will prevent the elongation necessary to develop the hold-down force. Failure to do this will result in broken anchor bolts.
- 3. Leveling screws must be greased to permit removal prior to the final torque.
- 4. Do not use shim packs as a leveling device unless it is planned to remove them prior to final torque application.
- 5. Leveling screw pads should be a minimum of 1/2" thick with minimum diameter of 3". Corners of pad must be rounded to approximately 1/8" radius to prevent stress cracking. Set leveling screws on the chipped concrete surface. Set the pad with quick set cement or Resin Repair Compound. With jacking bolt pads secure and level, set and level base with leveling screws.
- 6. The underside of the standard factory steel base plate was painted with epoxy grout primer and should only require proper cleaning. If the base must be sandblasted, prepare the contact faces to SSPC-SP 6 Spec. If base cannot be set within 24 hours of blasting, the underside must be coated with a compatible Rust Inhibitive Primer. Tighten foundation bolts loosely. Allow the grout to fully cure before firmly tightening the foundation bolts.

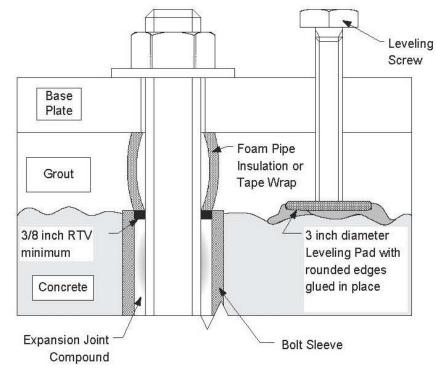


Figure 5. Grouting and Foundation Bolting

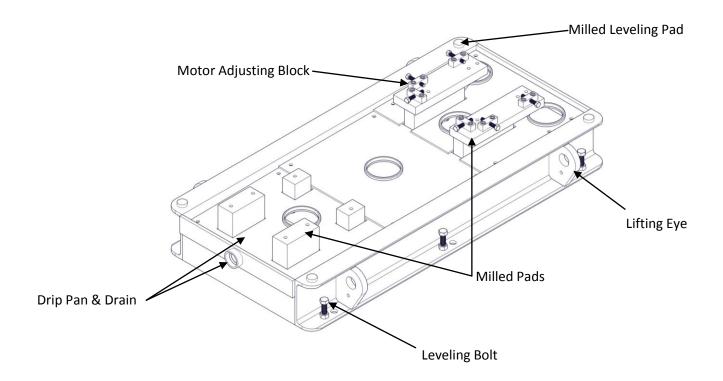


Figure 6. Unit Leveling

**F.** <u>COUPLING ALIGNMENT.</u> The pump and motor are connected by a coupling. The base aligns the pump and motor. No further alignment is necessary unless the pump or motor were removed from the base or if there was not a base purchased with the unit then the following is how to check the coupling alignment. The coupling should NOT be reconnected until the alignment has been completed.

#### NOTE

Refer to coupling manufacturer's manual for instructions regarding shaft alignment and recommended installation limits.

Soft Foot – The equipment must rest flat on its base. If one or more feet of the pump or motor are shorter, longer, or angled in some way to prevent uniform contact (a condition commonly known as "soft foot") it must now be corrected.

To improve the life of the coupling, the shafts must be aligned to minimize deflection of the flexing elements. Shaft alignment is required in the axial, parallel, and angular directions, with each of these values not to exceed the recommended installation limits. Shaft alignment can be measured using various established methods, including Laser Alignment, Reverse Dial Indicator, and Rim and Face.

The motor and pump shafts must be accurately aligned as any misalignment can cause damage to the coupling, motor, or pump. When the shafts are in correct alignment, the coupling hubs will be on a common axis, concentric with each other, and at the correct distance apart. If the coupling hubs are misaligned, it is general practice to adjust the driver to the pump. Insert full shims under the feet or supports of the motor and tighten fastening bolts until correct alignment is achieved.

1. Move the pump or motor to achieve acceptable alignment. When properly aligned, the disc packs will be centered and approximately parallel to their mating flange faces and the flexing elements will have little visible waviness when viewed from the side.

#### NOTE

Refer to the coupling manufacturer's manual for recommended installation limits for Parallel, Angular, and Axial alignment.

- 2. The "Parallel Misalignment" value (P) is the offset between the centers of the hubs, as shown in Figure 7.
- 3. When the Parallel Offset is measured by rotating the hubs in unison with dial indicators as shown in Figure 7, the Total Indicator Reading (TIR) should be divided by (2) to calculate (P).
- 4. It should be noted that parallel offset measured on the hub surfaces includes misalignment of the equipment shafting plus any variation (TIR) in the hubs. This may be helpful to consider during problem solving for alignment difficulties.
- 5. The "Angular Misalignment" value is the maximum difference between the measurements X and Y taken at opposite ends of the hub flanges, as shown in Figure 7.

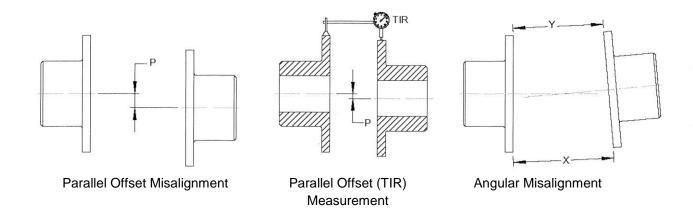


Figure 7. Coupling Alignment

#### G. PRE-INSTALLATION PROCEDURES.

- 1. Complete Section VII, Paragraph D.
- 2. Rotate the pump by hand. Check for any mechanical hesitation, binding or any acoustically transmitted signals from the pump. Hand rotation should be smooth and silent. Install the pump to foundation bolting and tighten to the system torque values. The pump should be rotated frequently during the procedure to tighten down the pumping unit.
- 3. After the pumping unit has been completely tightened down to the foundation, confirm that there is no binding.
- 4. Connect the piping.

**H.** <u>**PIPING.**</u> All piping should be independently supported near the pump so that pipe strain will not be transmitted to the pumping unit.



All piping connections must be made with the pipe in a freely supported state. Do not apply vertical or side pressure to align the piping with the pump flange.

Before connecting suction, discharge, and auxiliary piping, check to see that the piping is absolutely clean internally. Any debris in the piping will be drawn into the pump passageways and can cause extreme damage. The diameters of the suction and discharge lines must be equal to the diameters of the pump suction and discharge nozzles.

The pump is shipped with flange covers to protect flange faces and to prevent foreign matter from entering the pump. Flange covers should remain intact until suction and discharge piping are connected to pump flanges.

The suction pipe must be air tight. Suction lift lines shall be laid with a rising slope toward the pump and suction headlines with a downward slope towards the pump to avoid air pockets which will impair pump operation.

The discharge pipe should be as direct as possible using a minimum number of valves to reduce pipe friction losses.

Never use a straight taper (concentric) reducer in a horizontal suction line because air pockets may form in the top of the reducer and the pipe. Use an offset (eccentric) reducer instead.

It is recommended to install a check valve and closing valve in discharge line and closing valve in suction line,

depending on the type of plant and pump. The check valve, between the pump and valve, protects pump from water hammer and prevents reverse rotation in the event of power failure. Closing valves are used in priming, starting, and pump shut down. Pump must never be throttled by use of a valve in the suction line.

Thermal expansions of the pipeline must be compensated by appropriate measures so as not to impose any extra loads on the pump exceeding the permissible pipeline forces and moments. Refer to Table 5 for permissible forces and moments.

The coupling should be realigned after installing piping or when hot service units are at the final operating temperature. Refer to Section VII, Paragraph F for coupling alignment.

I. <u>AUXILIARY</u> <u>PIPING</u> <u>CONNECTIONS</u> <u>AND</u> <u>GAUGES.</u> In addition to primary piping connections, the pump may require other connections such as gauges or drains. All these lines and gauges should now be installed. Refer to vendor mechanical seal drawing for seal line connections to the cartridge mechanical seal.

**J.** <u>MOTOR.</u> See motor vendor's manual for motor information and information on connecting to the power supply.



Connection to the power supply must be effected by a trained electrician only. Check available main voltage against the data on the motor rating plate and select appropriate startup method.

**K. <u>DIRECTION OF ROTATION.</u>** Correct pump rotation is indicated by an arrow on the frame adaptor. The standard direction of rotation, viewed from the motor end, is clockwise.

# VIII. OPERATION.

#### A. PRE-START CAUTIONS.



Before activating the pumping unit, check to make sure there are no personnel working on the unit. Serious injury or death to personnel could result if the unit is activated while being worked on.

- 1. Before starting or operating the pump, read this entire manual, especially the following instructions.
- 2. Observe all caution or danger tags attached to the equipment.



Pumps are shipped without oil and should be filled with oil before starting the pumping unit. Operation of the unit without proper lubrication can result in overheating of the ball bearings, ball bearing failures, pump seizures and actual breakup of the equipment, exposing operating personnel to injury.

3. Fill bearing frame with oil (refer to Section X, Paragraph A and Table 7). Pumps are shipped with no oil in the bearing frame. If ball bearings are oil mist lubricated, turn on system, wait for proper oil quantity and check monitoring system.



Never run the pump dry. Close running fits within the pump are liquid lubricated. Dry running will result in pump seizure or damage.

- 4. Before starting the pump, fill the casing and suction line with liquid. The pump may be primed by using an ejector or vacuum pump.
- 5. Before starting a mechanical seal pump equipped with external flush lines, turn on mechanical seal water, and confirm the mechanical seal water has sufficient pressure and flow.
- 6. Check final alignment of pump and driver. Both shafts must turn freely by hand. If necessary, check coupling alignment.

7. Jog starter switch on motor to check that the direction of rotation agrees with the arrow stamped on the pump frame or base.

I-401

401 – 15.05.EN

- 8. Before starting the pump, install closed guards around all exposed rotating parts.
- 9. If excessive vibration or noise occurs during operation, shut the pump down and rotate shaft by hand. If excessive vibration or noise continues, consult a Carver representative.

**B. <u>PRIMING.</u>** Dry running a centrifugal pump can result in extensive damage and possible seizing. It is, therefore, imperative that the pump be primed prior to initial start-up and that prime must be maintained through subsequent start-stop cycles.

The priming procedure is different for positive and negative suction head systems. Follow the procedure listed below.

#### **Positive Suction Head:**

- 1. Open the vent on the highest point on the pump casing.
- 2. Open all suction valves.
- 3. Allow liquid to flow from vent hole until all air bubbles are vented. Then close the vent.
- 4. The pump is now primed.

#### **Negative Suction Head:**

- 1. Install an ejector or vacuum pump on the vent at the highest point on the casing.
- 2. Close the discharge valve.
- 3. Open the suction valve.
- 4. Start the ejector or vacuum pump.
- 5. Allow liquid to flow until a continuous flow is exhausted from ejector. Then close the valve to the vent.
- 6. The pump is now primed.

#### C. STARTING THE PUMP.



DO NOT operate pumping unit against a closed discharge system. If pump has any chance of seeing operation against a closed system, a bypass system allowing a minimum design flow should be installed. This bypass will be satisfactory for short periods of operation. For extended periods of operation the bypass should be sized for the minimum continuous flow required by the pump. Refer to Section VIII, Paragraph E for minimum/maximum flow calculation.

- 1. Confirm pumping unit is ready to start. Complete Section VIII, Paragraphs A and B.
- 2. If unit is equipped with mechanical seal cooling lines, turn on mechanical seal cooling water.
- 3. Fully open the suction valve.
- 4. Open discharge valves slightly, about 1 to 1 ½ turns if pump is being started for the first time or from being turned off for overhaul. Start the pump.
- 5. Slowly open discharge valves and adjust pressure and flow to the appropriate operating conditions. Refer to pump nameplate and system operating procedures for design point condition.

**D.** <u>**TURBINE**</u> **APPLICATIONS.** For turbine applications, consult your local distributor or a representative from Carver Pump Company.

#### E. MINIMUM/MAXIMUM FLOW CALCULATION.

Unless otherwise specified in the characteristic curves or on the data sheets, the following applies

- $Q_{min} = 0.1 \times Q_{opt}$  for short operation
- $Q_{min} = 0.3 \times Q_{opt}$  for continuous operation
- $Q_{max} = 1.1 \times Q_{opt}$  for 2-pole operation
- $Q_{max}$  = 1.25 x  $Q_{opt}$  for 4-pole operation
- Q<sub>opt</sub> = optimum efficiency

The data above refers to water and water-like liquids. However, if the physical properties of the fluids handled are different from water, the calculation formula below must be used to check if an additional heat build-up may lead to a dangerous temperature increase at the pump surface. If necessary, the minimum flow must be increased.  $T o = T f + \Delta T$ 

$$\Delta T = \frac{g^* H}{c^* \eta} * (1 - \eta)$$

c Specific heat[J / kg K]g Acceleration due to gravity $[m/s_]$ H Pump head[m]T f Temperature of fluid handled[°C]T o Temperature of casing surface[°C] $\eta$  Pump efficiency at duty point[-] $\Delta$  T Temperature difference[°C]

#### F. OPERATING CHECKS.

- Check for undue vibration or noise. If any occurs and does not stop within a short period of time, turn off the pump. For determination of the cause and its remedy refer to Troubleshooting in Section IX or consult Carver Pump Company.
- 2. Check and record flow and pressure readings. The flow and pressure readings should be within the operating system guidelines and similar to number stamped on the pump nameplate.
- Check and record ball bearing temperature according to the following steps, if resistance temperature detector (890E) or equal is not installed. Ball bearing temperature should not exceed 190° F (87° C).
  - a. Remove pipe plug (552C) on bearing frame (019).
  - b. Measure and record ball bearing temperatures under where pipe plug (552C) was located.
  - c. Reinstall pipe plug (552C) on bearing frame (019).
- 4. Check and record power input to the motor.
- 5. Check for leakage at mechanical seals.

#### G. STOPPING THE PUMP.

- 1. If the pump is being stopped for overhaul, slowly close the discharge valve. Otherwise leave discharge valves set at condition.
- 2. Stop the pumping unit in accordance with the directions on the electrical power supply.

- 3. Tagout and lockout power to motor according to OSHA Standard 1910.147.
- 4. Close discharge and suction valves and any auxiliary fluid lines.
- 5. The pumping unit is now off.

# H. INDEFINITE SHUTDOWN.



When pump is handling hazardous fluid, extreme care must be taken to ensure safety of personnel when attempting to drain pump and piping before disconnecting the pumping unit. Suitable protection devices should be used and/or protective clothing should be worn.

Relubricate ball bearings. Remove casing drain flange to drain casing. Drain all piping if there is a possibility of liquid freezing. Provide pump and driver with a protective cover.

#### SYMPTOM **PROBABLE CAUSE CORRECTIVE ACTION** 1. Check pump rating against actual head Failure to deliver 1. Discharge head above shutoff. condition. liquid. 2. Check valve stuck or improperly installed. 2. Adjust and/or reverse valve. 3. Impeller or suction line clogged. 3. Inspect suction line and impeller. Clean as necessary. 4. Incomplete priming or venting of pump or 4. Vent piping again carefully and prime piping. pump. 5. Valves are not fully open. 5. Open valves and if necessary, lock valves open to prevent accidental closure. 6. Excessive wear of internal parts. 6. Disassemble pump and replace worn parts. Excessive 1. Head lower than rating: trying to pump too 1. Adjust pressure flow. much liquid or operating at end of power performance curve. consumption. 2. Specific gravity or viscosity of liquid is too 2. Check liquid temperature and adjust as high. necessary. 3. Mechanical defects such as binding rotating 3. Check for excessive pipe strain. Check elements. foundation bolting. Replace defective parts. 4. Adjust system head. Trim impellers to 4. System head lower than design condition. actual condition. 5. Replace impeller or trim impeller to correct 5. Incorrect impeller diameter. diameter. Consult with Carver Pump before trimming impellers.

### Table 6. Pumping Unit Troubleshooting

# IX. TROUBLESHOOTING OPERATING PROBLEMS.

If you have followed the installation and starting procedures outlined in this manual, the pump should provide reliable service and long life. However, if operating problems do occur; significant time and expense can be saved if you refer to Table 6 to eliminate the most common causes of those problems.

Immediate action to be taken before proceeding with corrective actions in Table 6 is to stop the pump, refer to Section VIII, Paragraph G.

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
Insufficient discharge or	1. Discharge head above shutoff.	1. Check pump rating against actual head condition.
flow.	2. Air or gases in liquid.	2. Adjust and/or redesign suction system. Add liquid to system.
	3. Impeller or suction partially clogged.	3. Inspect suction and impeller and clean as necessary.
	4. Wrong direction of rotation.	4. Reverse direction of rotation.
	5. Specific gravity or viscosity of liquid is too high.	5. Check liquid temperature and adjust as necessary.
	6. Incorrect impeller diameter.	6. Replace impeller or trim impeller to correct diameter. Consult with Carver Pump before trimming impeller.
Vibration	1. Foundation bolting loose.	1. Torque bolting to proper values.
excessive.	2. Coupling halves not properly oriented relative to each other.	2. Adjust coupling halves system relative to match marks.
	3. Impeller partially blocked.	3. Inspect impeller and clean as necessary.
	4. Wrong rotation.	4. Adjust direction of rotation.
	5. Insufficient foundation.	5. Stiffen foundation as necessary.
	6. Pipe strain.	6. Modify piping as necessary.
	<ol><li>Coupling key to motor or coupling key to pump is not correct length.</li></ol>	7. Replace with key of correct length.
	8. Motor improperly balanced.	8. Balance motor.
Oil leak.	1. Loose connection.	1. Tighten connectors.
	2. Defective oil seal.	2. Replace oil seal.
	3. Loose or defective gasket.	3. Tighten bolting and/or replace gasket.
Ball bearing temperature	1. Lubrication, insufficient lubrication.	1. Lubricate according to Section X, Paragraph A.
excessive.	2. Defective ball bearing.	2. Replace ball bearing.
	3. Pump/driver shafts are misaligned.	3. Check coupling alignment.
	4. Piping causes pump to "warp".	4. Ensure piping transmits no stress to pump. Alter piping layout, if necessary. Realign pump and driver shafts.

# Table 6. Pumping Unit Troubleshooting - Continued

# X. MAINTENANCE.

Generally the pump does not need continuous supervision. The pump should always run quietly and smoothly, without vibration. To ensure such operation, the following maintenance schedule should be applied at regular intervals during operation of the pump. Occasional visual checks are recommended. Data should be recorded periodically for each pump to keep track of maintenance which has been performed and to note operational problems. A sample maintenance record sheet is provided for this purpose at the front of this manual.

Regular inspection and service are essential for safe operation of the pump in ATEX applications.

#### NOTE

Parts marked with \* are options or vary by pump or bearing housing size.

#### **Daily Inspection:**

- Visually inspect unit.
- Check ball bearing temperatures.
- Check ball bearing cooling flow rates, if applicable, refer to Table 8.
- Check for leakage at mechanical seal.
- Check that oil level is at center of bullseye, if applicable. If equipped with a constant level oiler\*, check oil level in the constant level oiler and refill as required. Insure proper oil mist if applicable.

#### Weekly Inspection:

- Check power (amps) readings.
- Check pump discharge pressure. Prescribed operating discharge pressure should never drop below 90 percent of design point pressure.
- Check vibration on pump and driver ball bearings. Vibration should NOT exceed 1.5 of overall displacement (unfiltered) peak to peak mils (0.001") at 3600 RPM and 3.0 of overall displacement (unfiltered) peak to peak mils (0.001") at 1750 RPM.

#### Monthly Inspection:

- Check foundation bolts.
- If necessary, grease coupling, but DO NOT over grease.
- Check foundation bolts.

#### Semi-annual Inspection:

- Grease ball bearings or change oil. DO NOT over grease or add excess oil.
- Check for coupling misalignment due to settling of foundation.
- If stand-by pumps are installed, it is advisable to operate pumps on a rotational system to give each pump a periodic duty. This ensures that stand-by pumps will have periodic operation and always be in good condition for instant start-up.

#### 300 Hours

• The first oil change should be carried out after 300 hours of operation.

#### 3000 Hours

• After the first oil change at 300 hours subsequent oil changes should be effected at intervals of 3000 hours of operation



# 25000 Hours - Overhaul

• For pump overhaul, complete Section XI, Service and Repair.

#### A. LUBRICATION OF PUMP BEARINGS.

**Radial and Thrust Bearings (016 and 018).** (Refer to Figure 14) The radial bearing (016) and the thrust bearings (018) are lubricated by oil in the bearing frame. The thrust bearings are installed back to back. Replace the bearings when disassembling the pumping unit for mechanical seal service.



Pumps are shipped without oil and should be filled with oil before starting the pumping unit. Operation of the unit without proper lubrication, oil to low or over full can result in overheating of the ball bearings, ball bearing failures, pump seizures and actual breakup of the equipment, exposing operating personnel to injury.

To change oil, unscrew bearing housing pipe plug (550) in bearing frame (019) and drain oil. Flush bearing frame with petrol or benzol. Slowly rotate the shaft by hand during flushing. Use correct oil viscosity for ambient temperature, fluid temperature and altitude. Start with ISO 32 and monitor oil condition. Replace bearing frame pipe plug and fill the bearing frame with oil (refer to Table 7 for oil recommendations) through the breather

vent (890B). Fill bearing frame until oil can be seen in the center of the oil view sight.

Manufacturer	ISO Grade 22, 32, 68
Royal Purple	Synfilm
Texaco	Regal R&O
Phillips	Magnus Oil
Exxon	Teresstic

#### Table 7. Oil Recommendations

# Table 8. Ball Bearing Cooling Flow Rates(100 PSIG MAX.)

Flow Rate
Oil Lube - Air
Oil-Lube – Water (If
Required*) – 1 GPM

\*Water cooling is not normally required up to 600° F.

\*Constant Level Oiler. If equipped with a constant level oiler, fill reservoir with oil, place thumb over spout, invert and screw reservoir into upper casting. Allow reservoir to empty, filling the bearing frame (Figure 9). Several fillings of the reservoir may be required before the actual oil level is reached. To avoid adding too much oil, never finish filling oil in bearing frame (019) through the vent breather (890B) at top of the bearing frame. Never use lower casting only as a fill spout, always fill thru reservoir. When oil level is reached, no more oil will run out of the reservoir bottle. Use constant level oiler's glass sight to check oil level in bearing housing. When oil level is reached tighten the three setscrews on the side of the upper oiler. The constant level oiler (890A) should be topped up as required during operation.

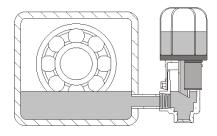


Figure 8. Constant Level Oiler

\*Oil Mist. The API Maxum OH2 pump comes equipped with appropriate connections for the installation of an oil mist system by the customer if oil mist lubrication is desired. Oil mist lubrication provides the greatest protection against contamination by dirt and water. The top port of the bearing frame (019) is plugged for oil mist lubricated ball bearings. The plug in the bottom of the power frame should be removed so that condensed oil vapor can be drained and/or removed from the bearing frame.

**B.** <u>LUBRICATION OF MOTOR BALL BEARINGS.</u> See motor manufacturer's instructions to be sure motor ball bearings are properly lubricated.

**C.** <u>TORQUE VALUES.</u> Refer to Table 9, Recommended Torque Values. Clean and properly lubricate threads and bearing face of the fastener to obtain the proper fastener loading from these torque values. Fasteners should be tightened evenly and in stages. Refer to your torque wrench manual for the proper use of your wrench.

Material					
	Steel	316			
Composite	(or otherwise	Stainless			
	noted)	Steel			
5	5	7			
11	11	12			
18	18	21			
33	39	45			
54	83	97			
80	105	132			
109	160	203			
144	236	300			
Acorn Nut - 30 ft-lbs while holding the coupling end of the shaft.					
	5 11 18 33 54 80 109 144 · 30 ft-lbs while	Steel         Steel           Composite         (or otherwise noted)           5         5           11         11           18         18           33         39           54         83           80         105           109         160           144         236			

#### Table 9. Recommended Torque Values (ft-lbs)

#### Table 10. Recommended Equipment

Tools	Materials	Test Equipment
Spanner Wrench	Oil	Coupling
Rawhide or	O-ring	Alignment
Wood Mallet	Lubricant	Gauges
Wooden Wedge		Volt-Amp Meter
Allen Wrench Set		
Socket, Open, &		
Box Wrench		
Set		
Vice Grips		
Torque Wrench		
Bearing Heater		

# XI. SERVICE AND REPAIR.

Refer to Figures 9 through 14 to locate the pump parts by item number and parts list. Figures will be referenced in each section.

#### A. PREPARATIONS FOR DISASSEMBLY OF PUMP.

During disassembly, match mark parts so they can be replaced in their original position. All parts should be thoroughly cleaned or replaced with new, if necessary. Sealing faces should be perfectly clean. Carver Pump Company recommends that all O-rings and shims are only used once.

The back pull-out design of the pump enables the pump to be disassembled without disconnecting the piping or removing the pump casing from the base. When the pump is fitted with a spacer coupling, the driver can also remain bolted on the base.



Factory authorized parts must be used to safely maintain your Carver Pump.

#### NOTE

To avoid damage to O-rings, check to make sure all parts are free of sharp edges or burrs.

Close suction and/or discharge valves. The pump casing should be cooled down to ambient temperature. The casing must be empty and not under pressure.

After prolonged operation, components may not be easily removed from shaft. In such instances, rust solvent may be used and suitable extracting tools applied wherever possible. DO NOT use force under any circumstances. Refer to Table 10, Recommended Equipment, for proper tooling during disassembly and assembly. Refer to appropriate sectional drawing for location of parts followed by an item number. Assemble the pump in accordance with accepted rules of engineering practice. Coat individual components with a suitable lubricant before assembling. Assembly of unit should be performed on a clean, flat surface.

While assembling the pumping unit, Carver Pump Company recommends that the following parts be replaced with new:

- O-rings / Gaskets
- Shims

- Bearings
- Seal, deflectors
- Mechanical seals

Prepare the pumping unit for disassembly using the following list (Refer to Figure 9):

1. Read this entire section and study the applicable sectional view drawing and parts list before disassembling the pump.




Before attempting to disassemble the pump, the electrical power supply to the driver must be locked and tagged in the "OFF" position to prevent injury or death to personnel servicing the pumping unit.

2. Stop the pumping unit; refer to Section VIII, Paragraph G.



When pump is handling hazardous fluid, extreme care must be taken to ensure safety of personnel when attempting to drain pump and piping before disconnecting the pumping unit. Suitable protection devices should be used and/or protective clothing should be worn.

- 3. Disconnect piping, gauge lines, and auxiliary connections, as necessary.
- 4. Drain casing (001) by removing hex nut (830H), lockwasher (840H) from casing drain blind flange (524). Remove casing drain blind flange and gasket (073B) from casing. If necessary, flush pump to remove corrosive or toxic pumpage. Install casing drain blind flange and gasket onto casing and secure with hex nut (830H), lockwasher (840H) and hex head bolt (800H) when fluid is completely drained. Collect and dispose of corrosive or toxic material appropriately.
- 5. Remove bearing housing pipe plug (550) in bearing frame (019) and drain oil. If a constant level oiler (890A\*) provides lubrication for ball bearings, drain oil from the bearing frame by removing bearing frame pipe plug at bottom of bearing frame. If bearings are mist lubricated, drainage of bearing frame is continuous.

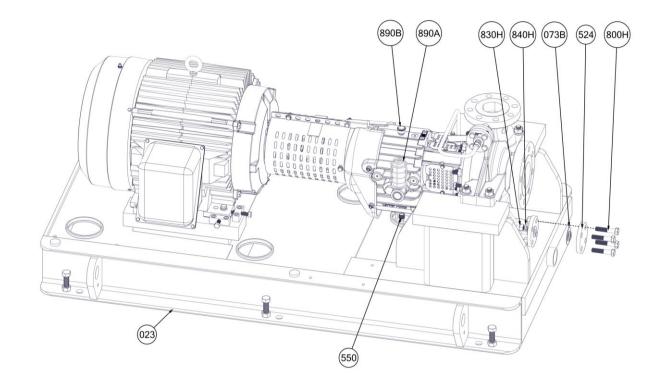


#### NOTE

Parts marked with \* are options or vary by pump or bearing housing size.

ltem Number	Description
023	Base
*073B	Gasket - Casing Drain Flange
524	Blind Flange – Casing Drain
550	Pipe Plug – Bearing Frame Oil Drain
*800H	Hex Head Bolt– Casing Drain Blind Flange
*830H	Hex Nut – Casing Drain Blind Flange
*840H	Lock Washer – Casing Drain Blind Flange
890A	Oiler

Figure 9. Draining the Pumping Unit	Figure 9.	Draining	the	Pumping	Unit
-------------------------------------	-----------	----------	-----	---------	------

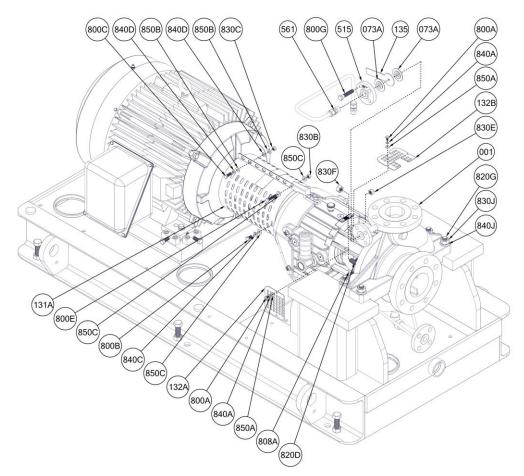

ltem Number	Description	Item Number	Description
001	Casing	820E**	Stud – Back Cover to Casing
***073A	Gasket – Auxiliary Piping	820G	Stud – Casing to Base
131A	Coupling Guard	830B	Hex Nut - Coupling Guard/Fan Shroud
132A	Splash Guard – Bearing Frame/Mechanical Seal	830C	Hex Nut - Coupling Guard
132B	Splash Guard/Cutout – Bearing Frame/Mechanical Seal	***830E	Hex Nut – Piping Plan Flange/Casing
***135	Orifice, Pan Handle	830F	Hex Nut – Back Cover/Casing
***515	Flange, Piping Plan	830J	Hex Nut – Casing to Base
***561	Male Connector	840A	Lockwasher – Splash Guard Bearing Frame/Mechanical Seal
800A	Hex Head Bolt –Splash Guard Bearing Frame/Mechanical Seal	840C	Lockwasher – Coupling Guard/Fan Shroud
800B	Hex Head Bolt – Coupling Guard/Fan Shroud	840D	Lock Washer – Coupling Guard
800C	Hex Head Bolt – Coupling Guard	840J	Lockwasher – Casing to Base
800E	Hex Head Bolt – Coupling Guard/Fan Shroud	850A	Washer – Splash Guard Bearing Frame/Mechanical Seal
***800G	Hex Head Bolt - Flange	850B	Washer – Coupling Guard
808A	Hex Head Bolt – Backcover	850C	Washer – Coupling Guard/Fan Shroud
820D	Stud – Back Cover to Casing		
***API Pini	ng Plan 11 Shown **Not Shown		

\*\*API Piping Plan 11 Shown \*\*Not Shown

# Figure 10. Preparation to Remove Back Pull-Out

- 6. (Refer to Figure 10) Remove capscrews (800A), flatwashers (850A) and lockwashers (840A) and remove splash guards (132A and 132B).
- Remove hex nuts (830B and 830C) from hex bolts (800C and 800E). Remove lockwashers (840D), flat washers (850B and 850C) and bolts (800C and 800E) from coupling guard (131A). Remove bolts (800B), washers (850C) and lockwashers (840C) from fan shroud/coupling guard. Remove coupling guard and disconnect coupling (042) halves, refer to Figure 11. Remove coupling spacer between coupling halves.
- 8. Remove hex nuts (830F) from studs (820D and 820E) fastening casing (001) to back cover (011). Use hex bolts (808A) to loosen rabbet fit of back cover (011) and casing (001). Pull rotating element back from casing (001) and take it to a suitable work area, refer to Section VII, Paragraph B for handling of pump, refer to Figures 4 and 12. Casing wear ring (007\*) will remain in the casing.


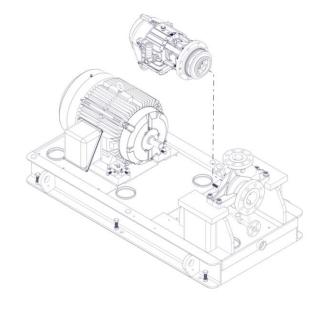


Figure 12. Remove back Pull-Out

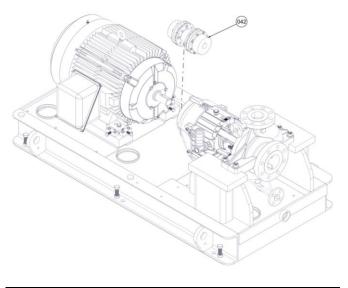

ltem Number	Description	
042	Coupling	

Figure 11. Remove Coupling

**B. <u>DISASSEMBLY OF PUMP.</u>** The instructions that follow are an aid for properly trained personnel to service your Carver Pump. Refer to Figures 13 and 14 to locate the pump parts by item number and parts list. If a specific sectional assembly drawing exists for a particular job then that drawing should be referred to for service work. Read this entire section before disassembling the pump.

The back pull-out design of the pump enables the pump to be disassembled without disconnecting the piping or removing the pump casing from the base. When the pump is fitted with a spacer coupling, the driver can also remain bolted on the baseplate.

#### NOTE

Parts marked with \* are options that vary by pumping unit and bearing housing size.

Refer to Section II for Safety precautions before disassembling pump.

After completion of dismantling, all parts should be thoroughly cleaned or replaced by new ones if necessary. All gaskets and sealing faces should be perfectly clean. When cutting new gaskets, make sure they are exactly the same thickness as the old ones.



Use a hoist with adequate lifting capacity; refer to Section VII, Paragraph B.



When pump is handling hazardous fluid, extreme care must be taken to ensure safety of personnel when attempting to drain pump and piping before disconnecting the pumping unit. Suitable protection devices should be used and/or protective clothing should be worn.

#### NOTE

Mark or number each component while dismantling according to sequence.

The individual components should be unscrewed or removed.

1. Complete Section XI, Paragraph A before continuing with disassembly.

2. Remove acorn nut (024) or inducer (246\*) and impeller washer (028). Pull impeller (002) from shaft (006). Impeller key (032A) may come off with impeller.

#### NOTE

Refer to mechanical seal vendor instructions for proper mechanical seal removal procedure.

- 3. For cartridge mechanical seals (089), reinstall seal clip and loosen setscrews holding the cartridge seal sleeve to shaft (006).
- 4. Remove hex nut (830D) and lockwasher (840E) from stud (820C) holding back cover (011) to bearing frame (019) and remove back cover.
- Wear ring (007A) will remain in back cover (011) unless replacement is necessary. Throttle bushing (063\*) may come off with back cover, if still on shaft (006) remove throttle bushing. Remove O-ring (119B\*) from back cover and discard. Remove casing gasket (73D\*) from back cover and discard.
- Remove hex nut (830G) and washer (850F\*) from stud (820F) and remove mechanical seal (089) from back cover (011).




Handle inboard seal deflector (716\*) with care. Mishandling could damage faces of inboard seal deflector.

#### NOTE

It is not normally necessary to remove the inboard magnetic seal, deflector (716\*) unless replacement of ball bearings is required.

- If necessary, remove inboard deflector seal (716\*) from inboard bearing cap (035). If equipped, remove inboard magnetic seal, deflector (716\*) from inboard bearing cap.
- Remove capscrews (800D) fastening inboard bearing cap (035) to bearing frame (019). Remove inboard bearing cap from shaft (006). Remove gasket (073C) from between inboard bearing cap and bearing frame and discard.
- 9. Remove pump coupling half and pump coupling key (046B).

### NOTE

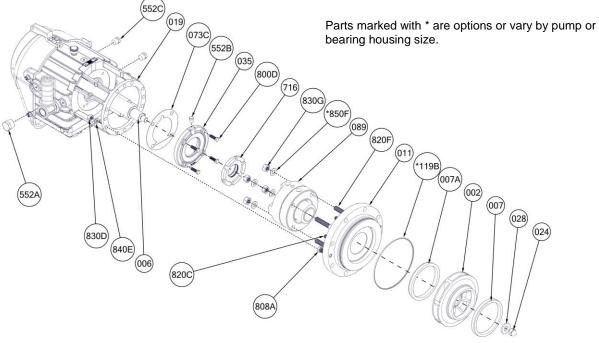

ltem Number	Description	
002	Impeller	
006	Shaft	
007	Wear Ring – Casing	
007A	Wear Ring –Back Cover	
011	Back Cover	
019	Bearing Frame	
024	Acorn Nut - Impeller	
028	Impeller Washer	
035	Bearing Cap, Inboard	
073C	Gasket – Bearing Frame/Bearing Cap	
089	Mechanical Seal - Cartridge	
*119B	O-ring – Back Cover/Casing	
552A	Pipe Plug – Bearing Frame	
552B	Pipe Plug – Bearing Cap	
552C	Pipe Plug – Bearing Frame/Bearing Temperature	
716	Seal, Deflector – Bearing Cap, Inboard	
800D	Hex Head Bolt – Bearing Cap, Inboard/Bearing Frame	
808A	Bolt – Back Cover	
820C	Stud – Back Cover/Bearing Frame	
820F	Stud – Back Cover/Mechanical Seal	
830D	Hex Nut – Bearing Frame/Back Cover	
830G	Hex Nut – Mechanical Seal	
840E	Lock Washer – Bearing Frame to Back Cover	
*850F	Washer – Mechanical Seal	

Figure 13. Back Pull-Out, Inboard Exploded View

- 10. Refer to Figure 14, remove locknuts (837) and flatwashers (850D) from studs (820A) fastening fan shroud (131B) to bearing frame (019) and remove fan shroud. Note any flatwashers on inside of fan shroud on studs for spacing.
- 11. Loosen hose clamp (590) and remove frame cooling fan (040) from shaft (006). Remove fan key (032B) from shaft (006).
- 12. Remove hex nut (830A) and lockwasher (840B), from stud (820B), remove outboard bearing cap (037) and outboard seal, deflector (715) from shaft (006).
- 13. Remove O-ring (119A) from bearing frame (019) and discard.



Handle outboard seal deflector (715) with care. Mishandling could damage faces of outboard seal deflector.

### NOTE

It is not normally necessary to remove the outboard magnetic seal deflector (715\*) unless replacement of ball bearings is required.


14. Remove outboard seal, deflector (715) from bearing cap (037). Remove outboard magnetic seal, deflector (715\*) from bearing cap.

- 15. Remove shaft (006) (with radial and thrust bearing assemblies) from outboard end of bearing frame (019).
- 16. Un-crimp tang on bearing lockwasher (069). Remove bearing locknut (022) and bearing lockwasher (069).

## NOTE

It is recommended that bearings removed from the shaft be replaced.

- 17. If necessary, pull thrust ball bearing (018) and radial bearing (016) from shaft (006).
- If required for maintenance loosen flinger setscrew (871\*) and remove oil flinger (060\*) from shaft (006).

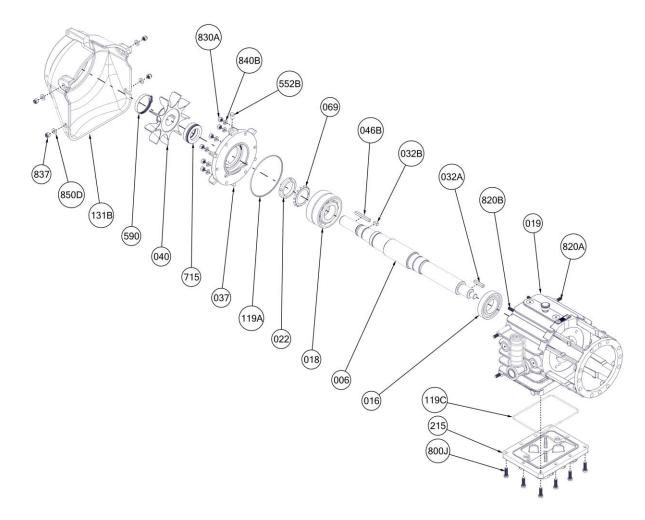

ltem Number	Description	ltem Number	Description
006	Shaft	131B	Fan Shroud
016	Radial Bearing	215	Oil Pan
018	Thrust Bearing	552B	Pipe Plug – Bearing Cap, Outboard
019	Bearing Frame	590	Hose Clamp – Bearing Frame Cooling Fan
022	Bearing Locknut	715	Seal, Deflector – Bearing Cap, Outboard
032A	Key, Impeller	800J	Hex Head Bolt – Oil Pan/Bearing Frame
032B	Key, Fan	820A	Stud, Bearing Frame/Fan Shroud
046B	Key, Coupling	820B	Stud – Bearing Frame/Bearing Cap, Outboard
037	Bearing Cap, Outboard	830A	Hex Nut – Bearing Cap, Outboard
040	Fan, Bearing Frame Cooling	837	Locknut, Fan Shroud
069	Bearing Lock washer	840B	Lockwasher –Bearing Cap, Outboard
119A	O-ring – Bearing Cap, Outboard/Bearing Frame	850D	Washer – Fan Shroud/Bearing Frame
119C	O-ring – Oil Pan/Bearing Frame		

Figure 14. Back Pull-Out, Outboard Exploded View

# C. PARTS INSPECTION.

- All parts should be thoroughly cleaned with a suitable solvent or replaced with new ones if necessary.
- 2. All sealing faces should be perfectly clean. All gaskets, O-rings, seals, and locking devices with a nylock feature are replaced with new if disturbed from position.
- Check shaft for runout, scratches, grooves, or any possible damage. Touch up scratches and grooves with a polishing cloth and inspect for remaining grooves or deep scratches. A bent or excessively damaged shaft should be replaced.
- Inspect casing and back cover for pitting, scoring, and erosion. The inside of the casing and back cover should be free of any pits or grooves. The maximum allowable depth is 1/8" (3mm). Replace the casing or back cover if any of these defects are present.
- 5. Inspect mechanical seal. Repair or replace mechanical seal that is extremely worn or damaged.
- Inspect impeller, fan, and coupling keys for distortion and push fit into keyways. The keys should be square on all four edges. They should fit without having to be forced. The keys should not rock in keyway. Replace keys or shaft if necessary.
- 7. Inspect tubing for kinking. Replace kinked tubing.
- 8. If the impeller shows excessive wear due to erosion or pitting, so that performance cannot be restored, it must be replaced. If a new impeller is installed, check to make sure that it is balanced and of the correct trim.
- 9. Check the wear ring clearance as follows:
  - a. Measure outside diameter of front impeller hub (002) in three places.
  - b. Measure inside diameter of casing wear ring (007) in three places.
  - c. If difference between the high reading of the inside diameter of the casing wear ring (007) and the low reading of the outside diameter of the impeller (002) hub exceeds double the maximum clearances given in Table 11, replace the casing wear ring according to Section XI, Paragraph E.
  - d. Measure outside diameter of back impeller hub (002) in three places.
  - e. Measure inside diameter of the back cover wear ring (007A) in three places.

f. If difference between the high reading of the inside diameter of the back cover wear ring (007A) and the low reading of the outside diameter of the back impeller (002) hub exceeds double the maximum clearances given in Table 11, replace the back cover wear ring according to Section XI, Paragraph E.

Table 11. Factory Wear Ring Cleara
------------------------------------

Pump Size	Factory Standard Diametric Clearance (inch)		
	Minimum	Maximum	
AA- 1½ x 1 x 6	0.012	0.017	
AB - 2 x 1½ x 6	0.015	0.020	
AC- 3 x 1½ x 6	0.014	0.019	
AD - 3 x 2 x 6	0.016	0.021	
AE - 4 x 3 x 6	0.016	0.021	
BA - 1½ x 1 x 8	0.012	0.017	
BB - 2 x 1½ x 8	0.012	0.017	
BC - 3 x 1½ x 8	0.014	0.019	
BD - 3 x 2 x 8	0.016	0.021	
BE – 4 x 3 x 8	0.017	0.022	
BF - 6 x 4 x 8	0.017	0.022	
CA – 2 x 1½ x 10	0.012	0.017	
CB - 3 x 1½ x 10	0.015	0.020	
CC - 3 x 2 x 10	0.016	0.021	
CD - 4 x 3 x 10	0.017	0.022	
CE - 6 x 4 x 10	0.018	0.023	
CF - 6 x 6 x 10	0.018	0.023	
CG - 8 x 6 x 10	0.019	0.024	
DA - 2 x 1½ x 13	0.016	0.021	
DB - 3 x 2 x 13	0.016	0.021	
DC - 4 x 3 x 13	0.017	0.022	
DD - 6 x 4 x 13	0.018	0.023	
DE - 6 x 6 x 13	0.018	0.023	
DF - 8 x 6 x 13	0.020	0.025	
DG - 10 x 8 x 13	0.021	0.026	
DH – 12 x 10 x 13	0.023	0.028	
ED- 6 x 4 x 16	0.018	0.023	
EA- 8 x 6 x 16	0.020	0.025	
EB - 10 x 8 x 16	0.021	0.026	
ED - 12 x 10 x 16	0.023	0.028	
EC - 14 x 12 x 16	0.024	0.029	
FA - 8 x 6 x 20	0.020	0.025	
FB - 10 x 8 x 20	0.021	0.026	
FC - 12 x 10 x 20	0.023	0.028	
FD – 14 x 12 x 20	0.025	0.030	

**D.** <u>**REASSEMBLY OF PUMP.</u>** The instructions that follow are an aid for properly trained personnel to assemble your Carver Pump. Refer to Figures 13 and 14 to locate the pump parts by item number and parts list. If a specific sectional assembly drawing exists for a particular job then that drawing should be referred to for assembly. Refer to Table 9 for recommended torque values. Read this entire section before reassembling the pump. During reassembly, install parts as applicable.</u>



During reassembly, install new locknuts, as they have a self-locking feature. Locknuts with a self-locking feature may not provide adequate security once disturbed from position.

During reassembly, install new O-rings, oil seals, and gaskets if disturbed from position. O-rings, oil seals and gaskets may have been damaged during disassembly.

During reassembly, Carver recommends that the ball bearings be replaced if disturbed from position.

### NOTE

If ball bearings were removed, proceed to step 1, if not removed proceed to step 4.

All parts should be thoroughly cleaned or replaced with new ones if necessary. All sealing faces should be perfectly clean, but do not scratch or alter surface finish on seal faces.

To ensure proper seating of bearing parts, rotate the ball bearing while clamping the parts.

Parts marked with \* are options that vary by pumping unit and bearing housing size.



While installing back-to-back ball bearings, do NOT unnecessarily hit ball bearings. If damage to ball bearings occurs, replace damaged ball bearings with new ball bearings.

After 25000 Hours of service replace the ball bearings.

- If removed, press thrust bearings (018) on shaft (006). Secure thrust bearings with bearing lockwasher (069) and bearing locknut (022). Crimp tang of lockwasher in grooves provided in bearing locknut.
- 2. If removed, install oil flinger (060\*) on shaft (006) and tighten flinger setscrew (871\*).
- 3. If removed, press radial ball bearing (016) on shaft (006).
- 4. Install shaft (006) (with radial and thrust bearing assemblies) from outboard end of bearing frame (019). Seating the thrust bearings (018) in the bearing frame.
- 5. Install new O-ring (119A) in groove provided around outboard end of bearing frame (019).



Handle outboard seal deflector (715) with care. Mishandling could damage faces of outboard seal deflector.

- If removed, press outboard magnetic seal deflector (715\*) into outboard bearing cap (037). Install outboard seal, deflector (715) in outboard bearing cap.
- Reinstall outboard bearing cap (037) on shaft (006). Secure outboard bearing cap with lockwashers (840B) and hex nut (830A) on stud (820B).
- 8. Install fan key (032B) in shaft (006). Reinstall frame cooling fan (040) over fan key on shaft, and secure with hose clamp (590).

### NOTE

Washers (850D) are used inside fan shroud (131B) on studs (820A) for spacing of fan shroud. Number of washers should have been noted during disassembly.

 Install washers (850D), noted during disassembly, on studs (820A). Install fan shroud (131B) on bearing frame (019) with washers and locknuts (837) on studs.



Handle inboard seal, deflector (716) with care. Mishandling could damage faces of inboard Seal Deflector.

- If removed, press inboard magnetic seal deflector (716\*) into inboard bearing cap (035). Install inboard seal deflector (716) in inboard bearing cap.
- Install gasket (073C) on inboard bearing cap (035). Install inboard bearing cap on shaft (006). Secure inboard bearing cap to bearing frame (019) with hex head bolts (800D).
- 12. Confirm back cover wear ring (007A) is in back cover (011). Install throttle bushing (063\*) in back cover. Install O-ring (119B\*) on back cover.

### NOTE

Refer to mechanical seal vendor instructions for complete seal installation procedure.

- 13. Install mechanical seal (089) on back cover (011) with hex nuts (830G) and washers (850F\*) on studs (820F). Tighten setscrews holding the cartridge seal sleeve to shaft (006) per manufacturers instructions. Remove seal clip after mechanical seal installation is complete.
- 14. Install back cover (011) to bearing frame (019) with hex nut (830D) and lockwasher (840E) on stud (820C).
- 15. Install impeller key (032A) in keyway on shaft (006).
- Reinstall impeller (002) on shaft (006). Secure impeller with impeller washer (028) and acorn nut (024) or inducer (246\*).
- 17. Install pump coupling key (046B) in shaft (006). Install coupling (042) half on shaft.



Use a hoist with adequate lifting capacity; refer to Section VII, Paragraph B.

- 18. Return assembly to installation site.
- 19. Confirm that forcing bolts (808A) are below the mating surface of the back cover (011). Confirm casing wear ring (007) is in casing (001).

- 20. Install back pull-out element in casing (001). Secure back cover (011) to casing with hex nuts (830F) on studs (820D).
- 21. Rotate shaft (006) by hand to insure shaft rotates freely and no rubbing noises are present.
- 22. Install coupling (042) spacer. Reconnect coupling halves. Align coupling according to Section VII, Paragraph F.
- Refer to Figure 10; reinstall coupling guard (131A). Secure coupling guard with washers (850B), lockwashers (840D), and hex nuts (830C), on bolts (800C and 800E). Secure coupling guard to fan shroud with bolts (800B), lockwashers (840C), and washers (850C).
- 24. If discharge nozzle (224\*) was removed from the casing (001), make sure that locknut (834\*) is still attached to the discharge nozzle. Install O-ring (119D) on discharge nozzle and install in casing. Tighten locknut to secure discharge nozzle to casing. (Refer to Figure 17)
- 25. Reconnect piping, gauge lines, and auxiliary connections, as necessary. Confirm casing is secure to base.
- Install splash guards (132A and 132B) on bearing frame (019). Secure splash guard with capscrews (800A), lockwashers (850A) and washers (840A).



Pumps should be filled with oil before starting the pumping unit. Operation of the unit without proper lubrication can result in overheating of the ball bearings, ball bearing failures, pump seizures and actual breakup of the equipment, exposing operating personnel to injury.

- 27. Fill bearing frame with oil (refer to Section X, Paragraph A and Table 7). If ball bearings are oil mist lubricated, turn on system, wait for proper oil quantity and check monitoring system.
- 28. Remove all tags from valves and switches.
- 29. Start pumping unit in accordance with Section VIII, Paragraph C.

**E.** <u>**REPLACEMENT OF WEAR RING.</u>** The pump has replaceable wear rings (007 and 007A) inserted into the casing (001) and back cover (011). The clearance between the wear ring and impeller hub will increase with wear. Internal leakage will result and pump performance will decrease. The allowable clearance and method of measurement is described in Section XI, Paragraph C.</u>

### NOTE

Parts marked with \* are options that vary by pumping unit and bearing housing size.

Refer to Section II for Safety precautions before disassembling pump.

## Casing Wear Ring (007).

The casing (001) must be removed from the base to replace the casing wear ring (007). To replace the casing wear ring (007) follow these steps:

# A CAUTION

When pump is handling hazardous fluid, extreme care must be taken to ensure safety of personnel when attempting to drain pump and piping before disconnecting the pumping unit. Suitable protection devices should be used and/or protective clothing should be worn.

- 1. Complete Section XI, Paragraph A before continuing with disassembly.
- Remove acorn nut (024) and impeller washer (028). Pull impeller (002) from shaft (006). Impeller key (032A) may come off with impeller.
- Disconnect suction and discharge piping. Remove hex nuts (830D) and lockwashers (840J) from studs (820G) to remove casing (001) from base (023) and take casing and impeller (002) to a work area with access to machine shop equipment.
- 4. Remove the casing wear ring (007) from the casing (001). This can best be accomplished on a lathe.
- 5. Press the new casing wear ring (007) into the casing (001). The beveled edge of the casing wear ring is installed away from the impeller (002).
- 6. Secure the new casing wear ring (007) to the casing (001) by tack welding in two places 180 degrees apart along edge of casing wear ring.

- 7. Place impeller (002) on an arbor and mount between centers in a lathe or a grinder. Indicate front outside impeller hub to within 0.002 TIR maximum to be sure the arbor and impeller are running square.
- 8. Turn the front outside wear ring surface of the impeller (002) until a 63 RMS or better finish is obtained.
- Measure the outside diameter of the front impeller wearing surface and record this value. See measurement instructions in Section XI, Paragraph C.
- 10. Mount the casing (001) with new casing wear ring (007) installed in a lathe. Indicate female rabbet to within 0.002 TIR maximum.

### NOTE

When replacing casing wear ring with the standard casing wear ring, (part number beginning with "00") machining in step 11 is not required. When replacing casing wear ring with the undersize casing wear ring (part number beginning with "US") machining in step 11 is required.

- 11. If replacing with an undersized casing wear ring, bore casing wear ring (007) to within the specified tolerance listed in Table 11 over the recorded size of the outside diameter of the front impeller wearing surface.
- 12. Reinstall casing (001) on base (023) and secure with hex nuts (830J) and lockwashers (840J) on studs (820G).
- 13. Reassemble pump. Refer to Section XI, Paragraph D, steps 15 through 29.

# Back Cover Wear Ring (007A).



When pump is handling hazardous fluid, extreme care must be taken to ensure safety of personnel when attempting to drain pump and piping before disconnecting the pumping unit. Suitable protection devices should be used and/or protective clothing should be worn.

1. Complete Section XI, Paragraph B, steps 1 through 5 before continuing. Remove back cover (011) with back cover wear ring (007A) still installed and the impeller (002) to a work area with access to machine shop equipment.

- 2. Remove the back cover wear ring (007A) from the back cover (011). This can best be accomplished on a lathe.
- 3. Press the new back cover wear ring (007A) into the back cover (011). The beveled edge of the back cover wear ring is installed away from the impeller (002).
- 4. Secure the new back cover wear ring (007A) to the back cover (011) by tack welding in two places 180 degrees apart along edge of back cover wear ring.
- 5. Place impeller (002) on an arbor and mount between centers in a lathe or a grinder. Indicate back outside impeller hub to within 0.002 TIR maximum to be sure the arbor and impeller are running square.
- 6. Turn the back outside wear ring surface of the impeller (002) until a 63 RMS or better finish is obtained.
- Measure the outside diameter of the back impeller wearing surface and record this value. See measurement instructions in Section XI, Paragraph C.
- 8. Mount the back cover (011) with new back cover wear ring (007A) installed in a lathe. Indicate male rabbet to within 0.002 TIR maximum.

# NOTE

When replacing back cover wear ring with the standard back cover wear ring, (part number beginning with "00") machining in step 9 is not required. When replacing back cover wear ring with the undersize back cover wear ring (part number beginning with "US") machining in step 9 is required.

- 9. If replacing with an undersized back cover wear ring, bore back cover wear ring (007A) to within the specified tolerance listed in Table 11 over the recorded size of the outside diameter of the back impeller wearing surface.
- 10. Reassemble pump. Refer to Section XI, Paragraph D, steps 12 through 29.
- **F.** <u>MOTOR.</u> The motor should be maintained in accordance with the manufacturer's instructions.
- **G.** <u>CHECK VALVE.</u> If applicable, the check valve should be maintained in accordance with the manufacturer's instructions.

# XII. PARTS LISTS AND DRAWINGS.

This section contains listings of parts and corresponding drawings. Table 12 notes the recommended spare parts

for this pumping unit. If you have a sectional assembly please reference it. Refer to Figures 10 through 14 drawings for the location of parts identified by item numbers.

ltem Number	Description	ltem Number	Description
002	Impeller	*073A	Gasket, Auxiliary Piping
*003	Impeller, Low-Flow High-Head	*073B	Gasket, Casing Drain Flange
007	Wear Ring	073C	Gasket, Bearing Frame/IB Bearing Cap
007A	Wear Ring	*073D	Gasket, Casing
016	Radial Bearing	089	Mechanical Seal
018	Thrust Bearing	119A	O-Ring, OB Bearing Cap
022	Bearing Locknut	*119B	O-Ring, Back Cover -Casing
024	Acorn Nut, Impeller	119C	O-Ring, Oil Pan
028	Impeller Washer	*119D	O-Ring, Discharge Nozzle
032A	Key, Impeller	715	Seal, Deflector - OB
032B	Key, Fan	716	Seal, Deflector - IB
046A	Coupling Key - Motor	*834	Locknut, Discharge Nozzle
046B	Coupling Key - Pump	837	Locknut, Fan Shroud
069	Bearing Lockwasher		

## Table 12. Recommended Spare Parts List

\*Parts are options that vary by pumping unit and bearing frame size.

ltem Number	Description
001	Casing
002	Impeller
006	Shaft
246*	Inducer
*Ontion	

\*Option

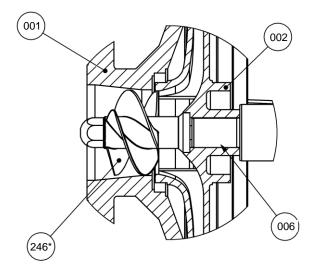


Figure 15. Inducer


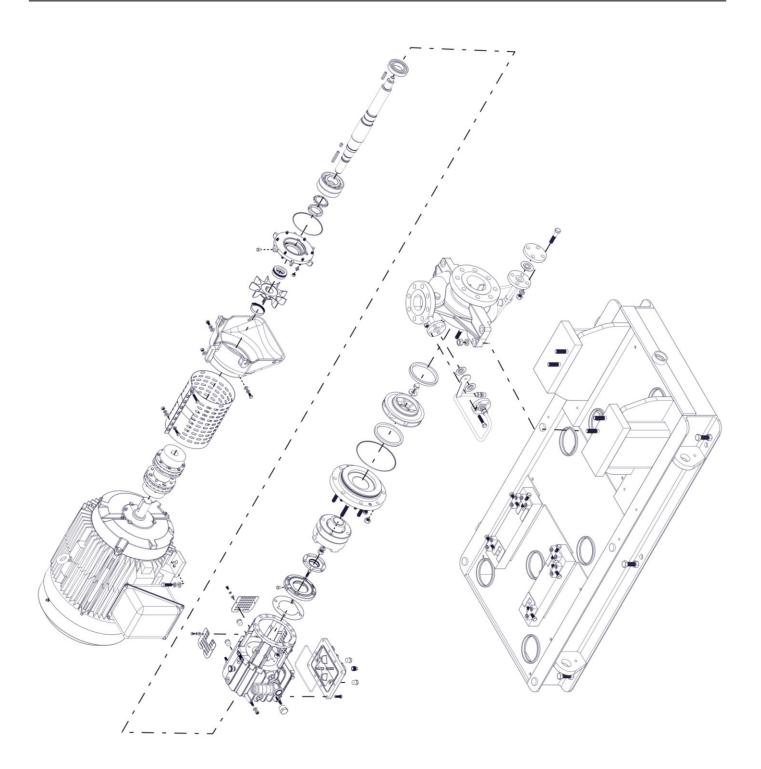


Figure 16. Exploded View of Complete Pump for Reference

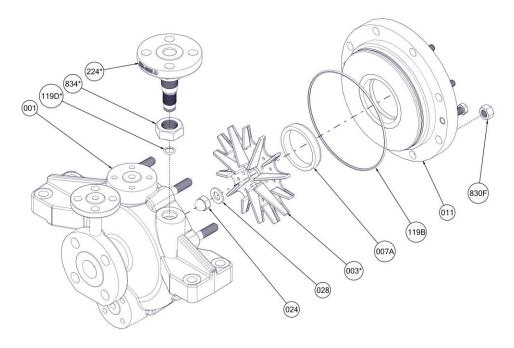

# NOTE

Parts marked with \* are options or vary by pump or bearing housing size.

ltem Number	Description	
001	Casing	
*003	Impeller, Low-Flow High-Head	
007A	Wear Ring, Back Cover	
011	Back Cover	
024	Acorn Nut, Impeller	
028	Impeller Washer	
119B	O-ring, Back Cover/Casing	
*119D	O-ring, Discharge Nozzle	
*224	Discharge Nozzle	
830F	Hex Nut, Back Cover/Casing	
*834	Locknut, Discharge Nozzle	

Figure 17. Wet End Low-Flow High-Head Option

### Table 13. Parts List

ltem Number	Description	
001	Casing	
002	Impeller	
*003	Impeller, Low-Flow High-Head	
006	Shaft	
007	Wear Ring – Casing	
007A	Wear Ring – Back Cover	
011	Back Cover	
015	Shim – Motor / Base	
016	Radial Bearing	
018	Thrust Bearing	
019	Bearing Frame	
022	Bearing Locknut	
024	Acorn Nut, Impeller	
023	Base	
028	Impeller Washer	
032A	Key - Impeller	
032B	Key - Fan	
035	Bearing Cap, Inboard	
037	Bearing Cap, Outboard	_
040	Fan, Bearing Frame Cooling	4
042	Coupling	4
046A	Coupling Key - Motor	_
046B	Coupling Key - Pump	_
*060	Oil Flinger	4
*063**	Throttle Bushing	
069	Bearing Lockwasher	
*073A	Gasket, Auxiliary Piping	_
*073B	Gasket, Casing Drain Flange	_
073C	Gasket, Bearing Frame/ Bearing Cap	_
*073D**	Gasket, Casing	_
081	Motor Adjusting Block	_
089	Mechanical Seal	_
119A	O-ring – Bearing Cap, Outboard/Bearing Frame	_
*119B 119C	O-ring, Back Cover -Casing	_
*119C	O-ring, Oil Pan/ Bearing Frame O-ring, Discharge Nozzle	_
-		-
131A	Guard, Coupling	-
131B	Fan Shroud	
132A	Guard, Splash – Bearing Frame/Mechanical Seal	_
132B	Guard, Splash – Bearing Frame/Mechanical Seal Cutout	
135	Orifice, Pan Handle	1
*143**	Oil View Sight	1
190	Electric Motor	1
215	Oil Pan	1
*224	Discharge Nozzle	1
226A**	Caution Label	1
226B**	Nameplate	
226C**	Rotation	-
246*	Inducer	
*515	Flange – Piping Plan	
524	Blind Flange - Casing Drain	
*536**	Reducer Bushing – Vent Breather	1
000		٦
*550	Pipe Plug – Bearing Frame Oil Pan	
	Pipe Plug – Bearing Frame Oil Pan Pipe Plug – Bearing Frame	
*550	Pipe Plug – Bearing Frame Pipe Plug – Bearing Ca	
*550 552A	Pipe Plug – Bearing Frame	
*550 552A 552B	Pipe Plug – Bearing Frame Pipe Plug – Bearing Ca	-

ltem Number	Description
*582**	Male Connecter - 90 degrees
590	Hose Clamp – Bearing Frame Cooling Fan
*715	Seal, Deflector – OB
*715**	Seal, Deflector – OB, Magnetic
*716	Seal, Deflector – IB
*716**	Seal, Deflector – IB, Magnetic
800A	Hex Head Bolt –Splash Guard Bearing Frame/Mechanical Seal
800B	Hex Head Bolt – Coupling Guard/Fan Shroud
800C	Hex Head Bolt – Coupling Guard
800D	Hex Head Bolt – Bearing Cap, Inboard/Bearing Frame
800E	Hex Head Bolt – Coupling Guard/Fan Shroud
800F	Hex Head Bolt – Motor/Base
*800G	Hex Head Bolt – Flange (Piping Plan)
*800H	Hex Head Bolt – Casing Drain Blind Flange
800J	Hex Head Bolt – Oil Pan Bearing Frame
804	Bolt, Motor Adjusting Block/Base
808A	Bolt – Back Cover
808B	Bolt – Motor Adjusting Block
808C	Bolt – Base Leveling Bolt
820A	Stud, Bearing Frame/Fan Shroud
820B	Stud – Bearing Frame/Bearing Cap, Outboard
820C	Stud – Back Cover/Bearing Frame
820D	Stud – Back Cover to Casing
820E	Stud – Back Cover to Casing
820F	Stud – Back Cover/Mechanical Seal
820G	Stud – Casing to Base
830A	Hex Nut – Bearing Cap, Outboard
830B	Hex Nut - Coupling Guard/Fan Shroud
830C	Hex Nut - Coupling Guard
830D	Hex Nut – Bearing Frame/Back Cover
*830E	Hex Nut – Piping Plan Flange/Casing
830F	Hex Nut – Back Cover/Casing
830G	Hex Nut – Mechanical Seal
*830H	Hex Nut – Casing Drain Blind Flange
830J	Hex Nut – Casing to Base
*834	Locknut, Discharge Nozzle
837	Locknut, Fan Shroud
840A	Lockwasher – Splash Guard Bearing Frame/Mechanical Seal
840B	Lockwasher – Bearing Cap, Outboard
840C	Lockwasher – Coupling Guard/Fan Shroud
840D	Lockwasher – Coupling Guard
840E	Lock Washer – Bearing Frame to Back Cover
*840F	Lock Washer – Motor to Base
*840G	Lockwasher – Back Cover/Casing
*840H	Lockwasher – Casing Drain Blind Flange
840J	Lockwasher – Casing to Base
850A	Washer – Splash Guard Bearing Housing/Mechanical Seal
850B	Washer – Coupling Guard
850C	Washer – Coupling Guard/Fan Shroud
850D	Washer – Fan Shroud/Bearing Frame
850E	Washer – Motor to Base
*850F	Washer – Mechanical Seal
*871**	Setscrew – Flinger
*890A	Oiler
890B	Vent Breather
*890D**	Vibration Sensor
*890E**	Temperature Sensor

\* Option \*\* Not Shown

This page intentionally left blank.



2415 Park Avenue, Muscatine, IA 52761 Phone: 563.263.3410 www.carverpump.com

> I-401 IOM 401 – 15.05.EN